


Innovative Technology Limited ®

NV9 Bank Note Validating System

Bank Note Handling Solutions Of The Future

Smiley®

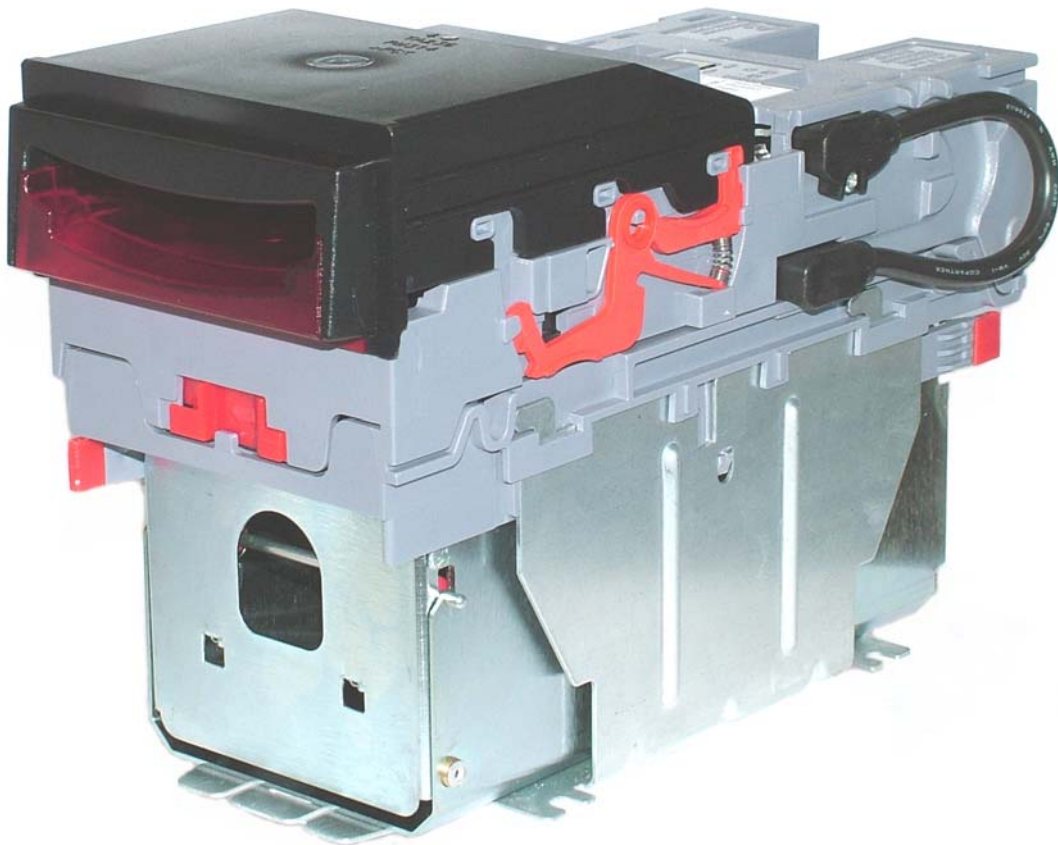

Operations Manual

GA326-4

© Copyright Innovative Technology Limited 2006

Revision History

INNOVATIVE TECHNOLOGY LTD				
Title:	NV9 Engineers Manual			
Drawing No:	GA326-3		Project:	
Author:	T. J. Crowley		Date:	29/10/2004
Format:	MS Word	2000		
Issue	Release Date	Modified By	Comments	
Issue 1	29/10/2004	TJC	First Draft	
Issue 2	21/06/2005	ATG	Second Draft	
Issue 3	14/07/2005	RJS	First Release	
Issue 4	31/08/2006	WB	Editorial Update	

WARNING:

ONLY SUITABLY TRAINED PERSONNEL SHOULD CARRY OUT ANY WORK ON THIS EQUIPMENT IN ACCORDANCE WITH ALL CURRENT LOCAL, NATIONAL AND INTERNATIONAL HEALTH AND SAFETY REGULATIONS.

CONTENTS

	Page
1: INTRODUCTION.....	5
2: SCOPE OF DOCUMENT.....	6
3: ENVIRONMENT AND POWER REQUIREMENTS.....	7
4: GENERAL DESCRIPTION.....	8
5: NV9 USER INTERFACE	9
5.1:DIPswitch Settings.....	9
5.2:LED Status Codes	10
6: INTERFACES: HARDWARE DESCRIPTION.....	11
6.1:Interface Connector Pin Details.....	11
6.2:Input and Output Hardware Circuits.....	12
6.3: Serial Interface Input and Outputs.....	12
7: MACHINE INTERFACES: PROTOCOLS	13
7.1:Parallel input and output:	13
7.2:Pulse Stream Output	13
7.3: Binary Output – BIN	14
7.4: Serial Input/Output – SIO (Baud Rate is defaulted to 300)	15
7.5 Serial Input/Output – SI2 (Baud Rate is defaulted to 9600)	17
7.6 Smiley® Secure Protocol - SSP	17
7.7 Multi-Drop Bus / Internal Communications Protocol (MDB/ICP).....	19
7.8 CCTalk Protocol – CCT.....	20
7.9 Cash Code Serial Protocol – Ccnet.....	21
7.10 Non-Isolated Serial Protocol. (NIS).....	21
8 UPDATING CURRENCY AND FIRMWARE FILES	22
8.1 ITL Bank Note Validator Currency Manager	22

8.2 NV9 – NV9 copy (Cloning)	22
Overview	22
Requirements	22
Start-UP Configuration	22
Cloning process	23
Firmware copy	23
Currency copy	23
9: MECHANICAL INSTALLATION	24
9.1: Changing or removing the bezels	24
9.2: Cash box Options	24
10 ROUTINE MAINTENANCE	25
10.1 Cleaning	25
10.2 Note Path Debris Clearing / Belt Changing	26
11: FAULT FINDING ANALYSIS	27
12 SUPPORT TOOLS	28
12.1 ITL Bank Note Validator Currency Manager	28
12.2 Validator Programming System (DA3)	28
12.3 Internet Website support	28
12.4 E-mail Support	28
APPENDIX A - DRAWINGS	29
APPENDIX B - ESCROW CONTROL	34
APPENDIX C - INTERFACE TOOLS DA1 - DA2	35
APPENDIX D - BEZELS	37
APPENDIX E – CASH BOXES	39
APPENDIX F - PC SYSTEM SPECIFICATION	40
APPENDIX G – WEBSITE REGISTRATION	41

1: Introduction

This manual describes the operation of the NV9 Bank note Validator as fitted with Firmware Version 3.15 or greater.

CAUTIONS:

- **THIS PRODUCT MUST BE FITTED WITH A 2 AMP FUSE BEFORE USE.**
- **THE NV9 VALIDATOR IS PIN FOR PIN COMPATIBLE WITH NV7/8/10 BUT NOT PIN FOR PIN COMPATIBLE WITH THE NV2/3/4/4X OR 5 SERIES PRODUCTS.**

We recommend that you study this manual as there are many new features permitting new uses and more secure applications.

If you do not understand any part of this manual please contact the factory, contact details are below, for assistance. In this way we may continue to improve our product.

Innovative Technology Ltd.

Derker Street

Oldham

England

OL1 4EQ

Tel: +44 (0) 161 626 9999

Fax: +44 (0) 161 620 2090

Email: support@innovative-technology.co.uk

Web site: www.innovative-technology.co.uk

Smiley® and the ITL Logo are international registered trademarks and they are the property of Innovative Technology Limited.

Innovative Technology has a number of European and International Patents and Patents Pending protecting this product. If you require further details please contact the factory.

Innovative Technology is not responsible for any loss, harm, or damage caused by the installation and use of this product. This does not affect your local statutory rights. If in doubt please contact Innovative Technology for details of any changes

2: Scope of Document

This document is intended for those who will:

- Design the NV9 into items of equipment.
- Build equipment using the NV9.
- Install equipment containing the NV9.
- Maintain equipment containing the NV9.

Although information is included which will allow a degree of fault diagnosis and repair, it is recommended that for all but simple mechanical repairs the unit be returned to an approved service centre for repair.

CAUTIONS:

- **NEVER EXCEED THE RECOMMENDED ENVIRONMENTAL AND ELECTRICAL LIMITS.**
- **DO NOT ATTEMPT TO LUBRICATE THE MECHANISMS AS THIS MAY AFFECT THE NOTE TRANSPORT.**
- **DO NOT POLISH THE LENS AS THIS MAY ALTER THE OPTICAL CHARACTERISTICS.**
- **IF THE NV9 VALIDATOR IS DISASSEMBLED THE UNIT MUST BE RE-CALIBRATED/RE INITIALISED, FOLLOWING RE-ASSEMBLY.**

Innovative Technology Ltd has a policy of continual product improvement. As a result the products supplied may vary from the specification described here.

3: Environment and Power Requirements

Environment	Minimum	Maximum
Temperature	+3°C	+50°C
Humidity	5%	95% Non condensing

Table 1 - Environmental Requirements

CAUTIONS:

- IF THE INPUT VOLTAGE FALLS BELOW +11V, THE NV9 MAY NOT OPERATE CORRECTLY (THE VALIDATOR WILL REJECT NOTES). THE AMBER STATUS LED AND FRONT BEZEL LIGHTS WILL FLASH TO INDICATE INCORRECT CONDITIONS.
- IT IS ESSENTIAL THAT THE POWER SUPPLY USED CAN SUPPLY AT LEAST 1.5 AMPS.

Electrical Supply	Minimum	Maximum
Supply Voltage (V dc) Absolute Limits	+11V	+15V
MDB IF5 Version Supply Voltage	+18V	+48V DC or 34VAC
Supply Ripple Voltage	0V	0.25V @100 Hz
Supply Currents:		
Standby		0.35A
Validating		1A
Peak (Stacker Motor stall)		1.5A

Table 2 - Power Requirements

4: General Description

NV9 Validator - the next generation of Smiley® Bank Note Validators

The NV9 Bank Note System is a compact note-validating machine (see figure 1), suitable for most money machines. It will accept up to 15 different denominations of notes in the Serial control mode, Pulse mode and Binary mode, 4 different notes in parallel mode, and will cope with different designs of banknotes having the same value such as are found in the United Kingdom and Scotland.

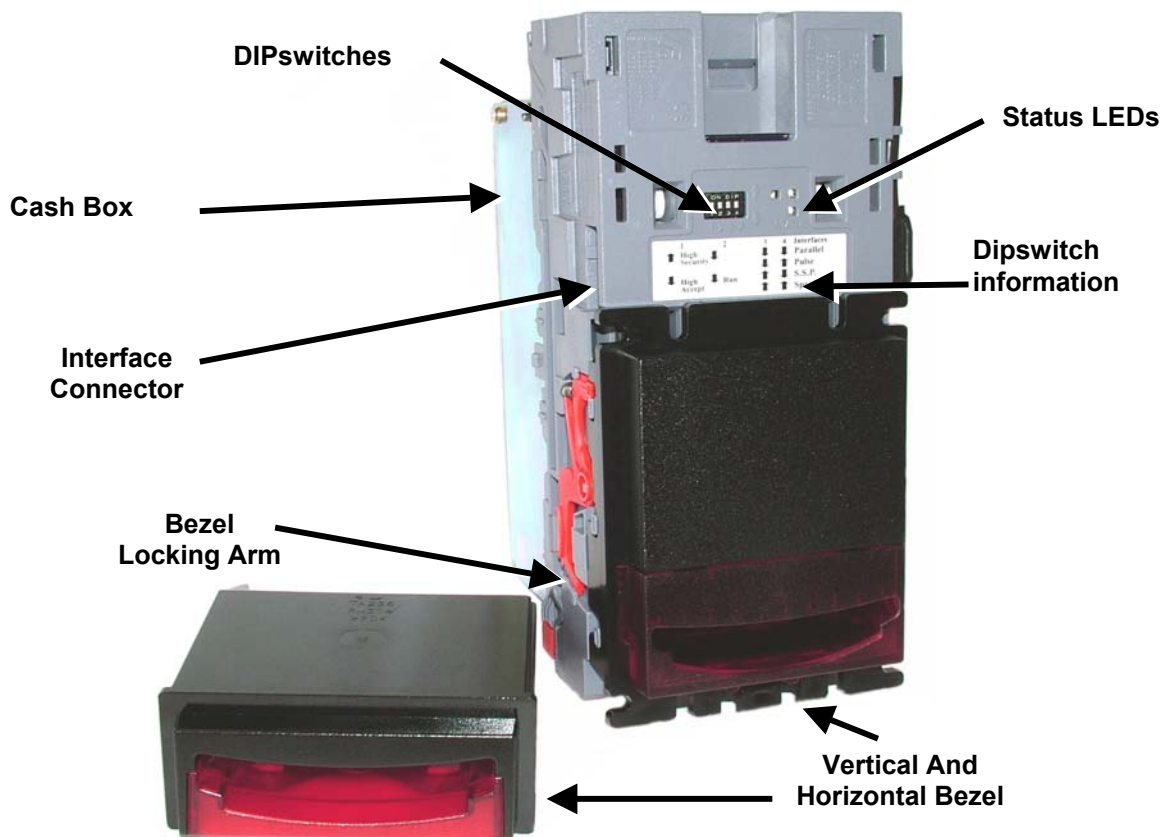


Figure 1 – The NV9 with Vertical and Universal Bezels

The NV9 Validator leaves the factory containing at least one currency data set so that it is ready for immediate installation. If it is desired to change the currency data set this may be done using either the NV9 to NV9 currency cloning system or the PC based Currency Management software.

New currencies and applications are being tested all the time, please refer to our web site or contact the factory for information concerning specific currencies if they are not already included on our approved list.

The NV9 is designed for easy installation in most machines. The stepped “Smiling Mouth” allows insertion of notes with one hand and simplifies the note handling mechanism.

Interfacing the Validator is very simple, with the choice of the following protocols:

- Parallel open collector outputs.
- Pulse stream open collector output.
- Binary open collector output.
- Smiley® Secure Protocol (SSP) secure serial communications.
- Simple serial I/O communications.
- MDB interface protocol.
- CCTalk
- Extended Interface / USA Serial (NIS)

5: NV9 User Interface

The user interface with the NV9 is shown below (see figure 2). It is simply a set of four DIPswitches and a RED LED, GREEN LED and an AMBER LED mounted on the top of the NV9. The DIPswitches set the basic operating mode of the unit, while the LED's indicate the operational status of the NV9.

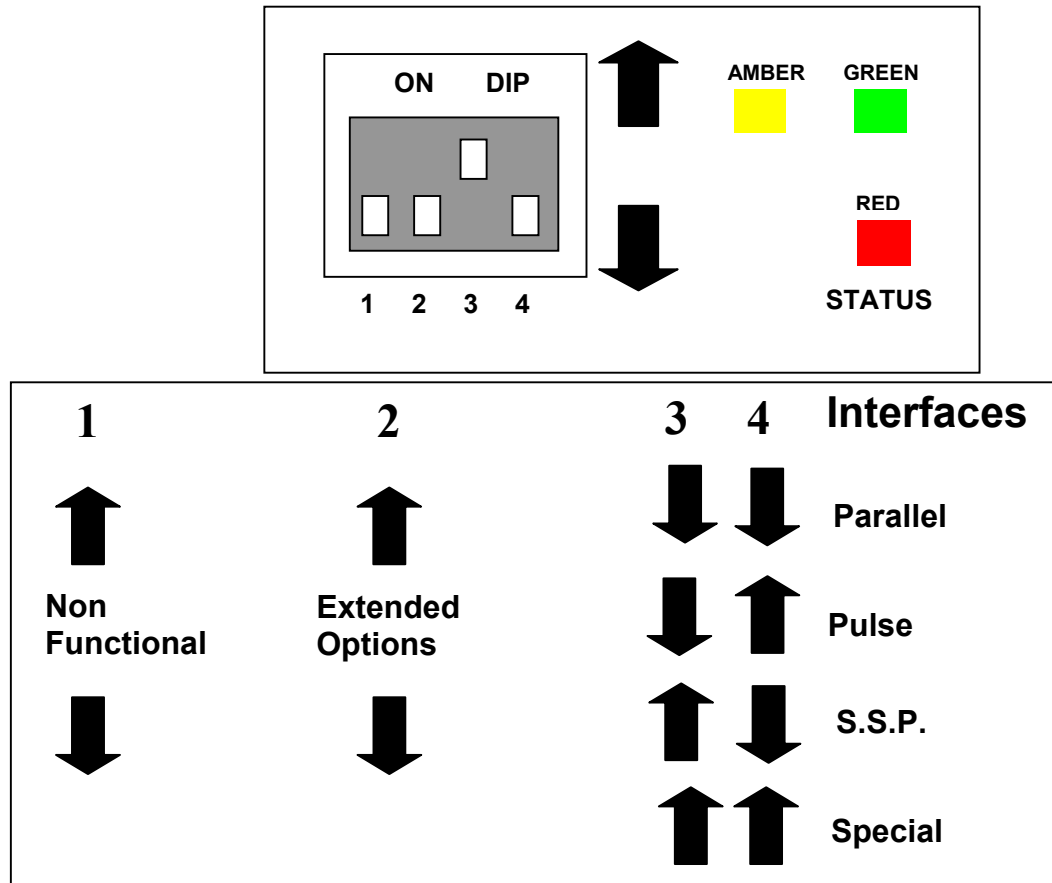




Figure 2 - User Display and DIPswitch Settings

5.1:DIPswitch Settings

The four DIPswitches can be set to a combination of either up  or down  depending on the configuration required for the particular NV9.

Switch 1 – Spare

Switch 1 currently has no function and is reserved for future use.

Switch 2 – Extended Options

This switch is used to modify the behaviour of the selected machine interface. Details of the function of this switch are covered in the interfaces' description in this manual.

Switches 3 and 4 – Machine Interface protocol selection

These switches are used to select the machine interface to be used. The NV9 supports numerous interfaces, as shown below, (see table 1).

Interface	Switch 3	Switch 4
Parallel	Down	Down
Pulse	Down	Up
SSP	Up	Down
Special	Up	Up

Table 1 - Switch 3 and 4 Machine Interface Selection

The details of the parallel, pulse, and SSP can be found in the machine interface protocols section of this manual.

Special Modes

The special interface depends on the firmware that is used in the NV9, the firmware shipped as standard is CCTalk (unless specified by order). The table below shows all the options that can be downloaded by the user:

BINARY
SIO
MDB
CCTalk
SI2
CCnet
NIS & Unencrypted CCTalk Available by request only

Information on each of these interfaces can be found in the 'machine interfaces protocol section' of this manual.

5.2:LED Status Codes

The three status LED's are located to the right of the DIPswitches on the top of the unit and are used to indicate a variety of status signals.

The red status is used to indicate system problems, while the green status indicates system health; these are described below in table 2.

LED Status	Description
Slow flashing GREEN led Heartbeat (Slow = 1 second period)	In normal RUN operation, when the NV9 is ready to read a note, the green status led will flash slowly ("Heartbeat") to signal a "healthy" status.
On Start Up - Flashing RED one second period	Firmware fail
During operation - Flashing RED one second period.	NV9 has a Transportation Error somewhere in the note path
On Start Up - Fast flashing RED (fast = half second period)	Dataset fail
During operation - Fast flashing RED (fast = half second period)	NV9 cannot calibrate, sensor(s) may be blocked
Permanent RED	Memory has been corrupted
Flashing AMBER and bezel lights	Power supply is incorrect, check specification
Alternating RED and GREEN	Either a safe jam or Cash box full

Table 2 - LED Status Codes

6: Interfaces: Hardware Description

The NV9 interface connector is located on the left side of the unit; it has 16 pins (see figure 3) refer to Table 3 for the pin allocation. Two are used for the 0V and +12V power supply and there are five outputs and five inputs, the remaining four pins are reserved for factory use and should not be connected. An example mating connector is Molex type Part No: 39-51-2160

(Note: When assembling own cables ensure the Moulding pin-out below is followed)

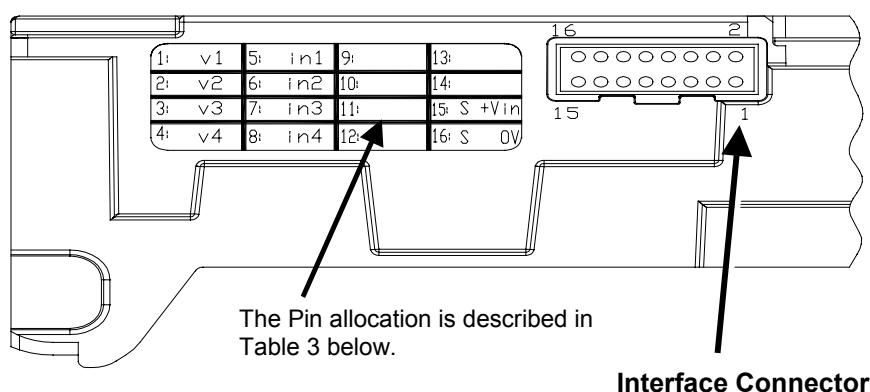


Figure 3 - Interface Connector

6.1:Interface Connector Pin Details

The connector pin details are described below (see table 3); they use an IDC 16-pin 0.1" pitch header with 2 rows of 8 pins.

Pin	Name	Description
1	Vend 1	Open Collector Output. Function changes depending on Machine Interface Protocol. (See individual interface descriptions for details) Also the Pulse Stream output Also the serial Output pin in SSP Serial Mode, and other serial modes
2	Vend 2	Open Collector Outputs. Function changes depending on Machine Interface Protocol. (See individual interface descriptions for details)
3	Vend 3	
4	Vend 4	
5	Inhibit 1	Inhibit channel 1 by holding this pin HIGH. To Enable a channel the inhibit must be held LOW Also the serial Input pin in SSP Serial Mode, and other serial modes
6	Inhibit 2	Inhibit channel 2 by holding this pin HIGH
7	Inhibit 3	Inhibit channel 3 by holding this pin HIGH
8	Inhibit 4	Inhibit channel 4 by holding this pin HIGH
9	Busy	NV9 is validating and stacking output. Active low while the NV9 is reading, transporting or stacking a note.
10	Escrow	Operate Escrow function by holding LOW (see Appendix B for full details)
11	Factory Use Only	Do Not Connect
12	Factory Use Only	Do Not Connect
13	Factory Use Only	Do Not Connect
14	Factory Use Only	Do Not Connect
15	+Vin	Nominal 12V DC supply
16	0V	0V Supply

Table 3 - 16 Pin Connector Details

6.2: Input and Output Hardware Circuits

CAUTION: THE OUTPUT LOW SIGNAL IS AFFECTED BY THE VALUE OF THE PULL UP RESISTOR ON THE HOST MACHINE INTERFACE. ENSURE YOUR SIGNAL LOW LEVELS COMPLY WITH THE 74HC CMOS SERIES SPECIFICATION FOR RELIABLE OPERATION, (SEE FIGURE 4).

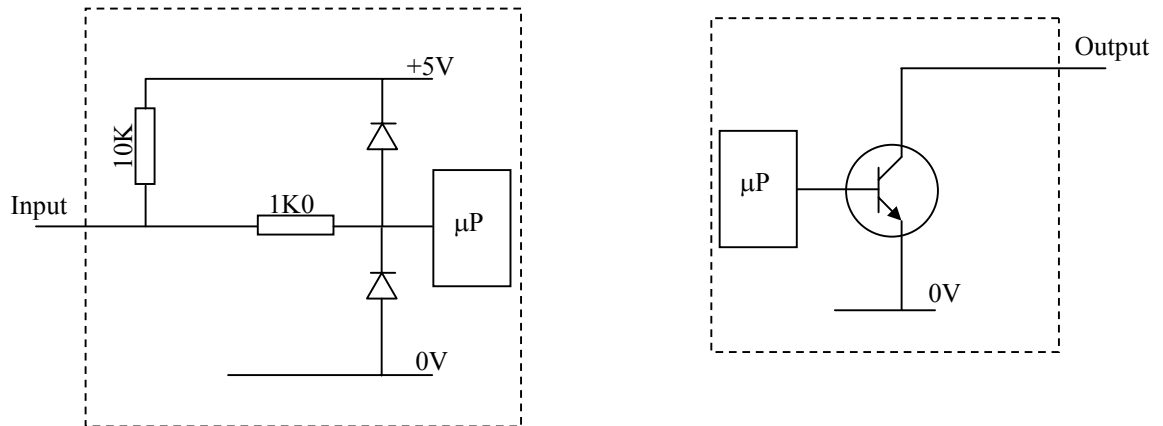


Figure 4 - Input and Output Circuits

NOTES:

- All outputs are open collector transistors.
- All Inputs are held high to internal +5V via 10KΩ. The input structure is a CMOS gate with anti-static protection fitted.

Interface Logic levels	Logic Low	Logic High
Inputs	0V To +0.5V	+3.7 V +12V
Outputs with 2K2Ω pull up	0.6V	Pull up voltage of host interface
Maximum Current Sink	50mA per output	

Table 4 - Interface Logic Levels

6.3: Serial Interface Input and Outputs

CAUTION: THE SERIAL INTERFACES WILL ONLY WORK IF THE RELEVANT INTERFACE SOFTWARE IS CORRECTLY INSTALLED.

Name	Description
Validator TxD	Vend 1
Validator RxD	Inhibit 1

Table 5 - Serial Interface Inputs and Outputs

7: Machine Interfaces: Protocols

The NV9 is set to the required Protocol/Interface, by setting the DIPswitches on top of the NV9 to the positions detailed below:

7.1: Parallel input and output:

To use parallel output for 4 notes/channel acceptance, DIPswitches 3 and 4 must be set down. This mode is selectable regardless of which extended interface is programmed into the validator

(Dipswitch 2 is not functional in this mode)

Vend Signals: (Pins 1 to 4). The four channels have their own individual outputs. If a note is recognised then the relevant Vend line is set low for a period of 100 ± 3 ms. Pulses outside these limits should be rejected as a precaution against false triggering.

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (Pin 10) Hold this pin Low to enable the single note escrow function.

(See [Appendix B](#)).

If the host machine aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting high, all the inhibits, causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channel 1 to 4 have their own inhibit input to allow the host machine to refuse specified notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel, the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

All four inhibits may be connected together to create a 'global' inhibit. In this way the NV9 may be brought in and out of operation by the host machine.

7.2: Pulse Stream Output

To use pulse stream output for acceptance of up to 16 channel / note acceptance, DIPswitch 3 must be down and DIPswitch 4 must be up. This mode is selectable regardless of which extended interface is programmed into the validator

Vend Signal: (Pins 1) When a note is recognised vend 1 will pulse a pre set number of times, the number of pulses and the timing is set in the ITL BNV validator manager program (and set to default values with supplied dataset).

DIPswitch 2: Used to select/de-select the X4 Pulse Multiplier.

Down – Number of pulses are as programmed in the dataset.

Up – Number of pulses is multiplied by 4 (Useful for USD Datasets)

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (Pin 10). Hold this pin Low to enable the single note escrow function.

(See [Appendix B](#)).

If the host machine aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting all the inhibits high causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channels 1 to 4 have their own inhibit input to allow the host machine to refuse specified values of notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel, the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

Note: Channels higher than four cannot be individually inhibited, but will be globally inhibited if inhibits 1 to 4 are inhibited.

7.3: Binary Output – BIN

To use Binary mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the BIN option of the interface firmware must be loaded into the NV9.

(Dipswitch 2 is not functional in this mode)

In the event that the machine needs more than 4 notes to be recognised, but the host machine cannot take advantage of the serial communication methods then the NV9 can be set to give a binary pattern output on the four parallel output pins.

If the NV9 is set to binary mode it will issue the vend signals as a binary pattern on the parallel outputs for $100 \pm 3\text{ms}$. In this way a maximum of 15 different notes can be accepted and 4 notes individually inhibited.

Vend Signals: (Pins 1 to 4). The four channels have their own individual outputs. If a note is recognised the binary representation of the channel number will be pulled low for $100 \pm 3\text{ms}$. Pulses outside these limits will be rejected as a precaution against false triggering due to noise.

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (pin 10). Hold this pin Low to enable the single note escrow function.

(See [Appendix B](#)).

If the host machine aborts the transaction by setting the corresponding inhibit input high on pin 10, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting all the inhibits high causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channels 1 to 4 have their own individual inhibit input to allow the host machine to refuse specified values of notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

Note: Channels higher than four cannot be individually inhibited, but will be globally inhibited if inhibits 1 to 4 are inhibited.

7.4: Serial Input/Output – SIO (Baud Rate is defaulted to 300)

Existing Smiley® NV4 users may already be using the serial input/output facility in conjunction with the parallel inputs. The NV9 Validator also supports this system. However this interface is not recommended for new designs, the Smiley® Secure Protocol SSP interface is recommended.

CAUTION:

- **THE NV9 DOES NOT SUPPORT THE SIMPLE SERIAL DATA OUT ONLY MODE AS AVAILABLE ON NV4 AND EARLIER MODELS NV2 AND NV3. IT ONLY SUPPORTS THE SERIAL DATA INPUT/OUTPUT MODE.**
- **THE HOST MACHINE DOES NOT ECHO MESSAGES BACK TO THE VALIDATOR.**
- **THE NV9 DOES NOT OPERATE IN TRUE RS232 MODE. (ONLY TTL LEVEL).**
- **THE NV9 WILL NOT ENABLE IN SERIAL I/O MODE IF INHIBIT 3 LINE IS HELD LOW ON POWER UP**

To use simple serial mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the SIO option of the interface firmware must be loaded into the NV9.

(Dipswitch 2 is not functional in this mode)

Commands are provided to fully control the operation of the NV9, the notes to be accepted and rejected can be set and a single note escrow mode can be enabled. In simple serial mode single byte commands are transmitted to the Validator, the Validator echoes each valid command it receives.

NOTES:

- The NV9 will operate at 9600 Baud rate if Inhibit 2 line is held low when powered up.
- The NV9 will not be enabled in serial I/O mode if Inhibit 3 line is held low when the unit is powered up. A software enable must be sent to enable the validator.

The data is formatted as follows:

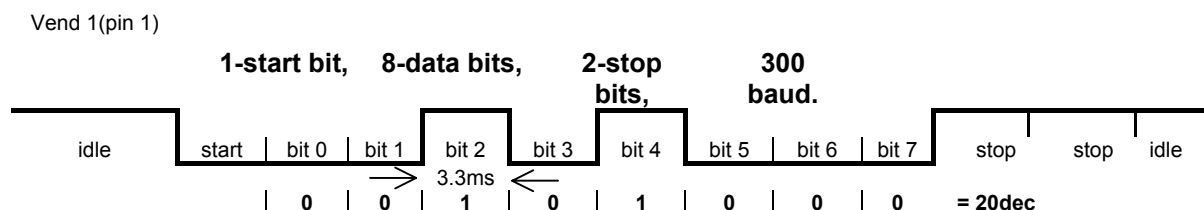


Figure- 5 Typical Serial Output: Transmission of the value 20 (decimal), Note not recognized

The NV9 will receive and transmit the following event codes:

Recognised Receive Codes to NV9		Transmitted codes from NV9	
MESSAGE	DECIMAL VALUE	MESSAGE	DECIMAL VALUE
Inhibit C1	131	Note Accept on C1	1
Inhibit C2	132	Note Accept on C2	2
Inhibit C3	133	Note Accept on C3	3
Inhibit C4	134	Note Accept on C4	4
Inhibit C5	135	Note Accept on C5	5
Inhibit C6	136	Note Accept on C6	6
Inhibit C7	137	Note Accept on C7	7
Inhibit C8	138	Note Accept on C8	8
Inhibit C9	139	Note Accept on C9	9
Inhibit C10	140	Note Accept on C10	10
Inhibit C11	141	Note Accept on C11	11
Inhibit C12	142	Note Accept on C12	12
Inhibit C13	143	Note Accept on C13	13

Inhibit C14	144	Note Accept on C14	14
Inhibit C15	145	Note Accept on C15	15
Inhibit C16	146	Note Accept on C16	16
Un-inhibit C1	151	Note Not Recognised	20
Un-inhibit C2	152	Mechanism running slow	30
Un-inhibit C3	153	Strimming attempted	40
Un-inhibit C4	154	Channel 5 Note Rejected (fraud channel)	50
Un-inhibit C5	155	STACKER Full or Jammed	60
Un-inhibit C6	156	Abort During Escrow	70
Un-inhibit C7	157	Note may have been taken to clear jam	80
Un-inhibit C8	158	Validator Busy	120
Un-inhibit C9	159	Validator Not Busy	121
Un-inhibit C10	160	Command Error	255
Un-inhibit C11	161		
Un-inhibit C12	162		
Un-inhibit C13	163		
Un-inhibit C14	164		
Un-inhibit C15	165		
Un-inhibit C16	166		
Enable serial escrow mode	170		
Disable serial escrow mode	171		
Accept Escrow	172		
Reject Escrow	173		
Status	182		
Enable all	184		
Disable all	185		
Disable escrow timeout	190		
Enable escrow timeout	191		

Table 6 - Receive and Transmit Codes

Example transactions are shown below (see table 7):

Event	Validator	Decimal Value	Host
Note entered into validator Note Accepted Channel 2	Validator Busy	120 →	
	Validator Ready	121 →	
	Accept on Channel 2	2 →	
Note entered into validators Note not recognised	Validator Busy	120 →	
	Validator Ready	121 →	
	Note not recognised	20 →	
Validator has returned note	Validator Ready	121 →	
Software Inhibit Channel 4	Inhibit C4	← 134	Inhibit C4
	Channel 4 Inhibited	134 →	
Software Enable Channel 4	Uninhibit C4	← 154	Uninhibit C4
	Channel 4 Inhibited	154 →	
Status Report 3 byte status message	Inhibit status Channels 1-8 Inhibit status Channels 9-16 Escrow On (=1) / Off (=0)	← 182	Status Request
		Byte 1 →	
		Byte 2 →	
Turn on Escrow Mode	Escrow Mode Enabled	← 170	Enable Escrow Mode
		170 →	
Note accept in Escrow Mode Note entered into validator Note Accepted Channel 2	Validator Busy Validator Ready Accept on Channel 2	120 →	Accept Note in Escrow
		121 →	
		2 →	
	Accept Escrow Accept on Channel 2	← 172	
		172 →	
		2 →	

Table 7 - Example Protocols

7.5 Serial Input/Output – SI2 (Baud Rate is defaulted to 9600)

This mode is identical to the SIO mode detailed in chapter 7.4 with the exception of the Baud rate used and the data format.

- Only 9600 baud rate is available.
- Inhibit 2 has no function.
- All Transmit and Receive codes and Example protocols are the same as in Chapter 7.4 (See tables 6 and 7 above)

The data is formatted as follows:

1-start bit - 8 data bits - 1 stop bits - 9600 baud

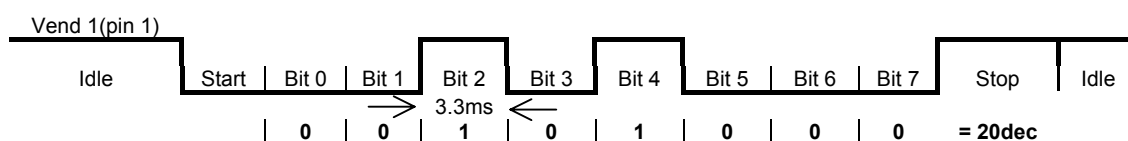


Figure- 6 Typical Serial Output: Transmission of the value 20 (decimal), Note not recognized

7.6 Smiley® Secure Protocol - SSP

NOTE: Please refer to the Smiley® Secure Protocol (SSP) Specification (ITLDrawing GA138) on the web site for full details of the SSP protocol.

To use SSP mode DIPswitch 3 must be set up and DIPswitch 4 must be set down. This mode is selectable regardless of which extended interface is programmed into the validator

(DIPswitch 2 is non functional in this mode).

SSP is a secure serial interface specifically designed to address the problems experienced by cash handling systems in gaming machines. Problems such as acceptor swapping, reprogramming acceptors and line tapping are all addressed. This interface is recommended for all new designs.

The interface uses a master slave model, the host machine is the master and the peripherals (note acceptor, coin acceptor or coin hopper) are the slaves.

Data transfer is over a multi-drop bus using clock asynchronous serial transmission with simple open collector drivers. The integrity of data transfers is ensured through the use of 16 bit CRC checksums on all packets.

Each SSP device of a particular type has a unique serial number; this number is used to validate each device in the direction of credit transfer before transactions can take place.

Commands are currently provided for coin acceptors, note acceptors and coin hoppers. All current features of these devices are supported.

Features:

- Serial control of Note / Coin Validators and Hoppers
- 4 wire (Tx, Rx, +V, Gnd) system
- RS232 (TTL) - open collector driver
- High Speed 9600 Baud Rate
- 16 bit CRC error checking
- Data Transfer Mode

Benefits:

- Proven in the field
- Simple and low cost interfacing of transaction peripherals.
- High security control of payout peripherals.
- Defence against surrogate validator fraud.
- Straightforward integration into host machines.
- Remote programming of transaction peripherals
- Open standard for universal use.

For detailed information and full protocol specification please refer to SSP Interface Specification ITL (Drawing GA 138), this is available from the ITL website

www.innovative-technology.co.uk.

To help in the software implementation of the SSP, ITL can provide DLL controls and Visual Basic applications on request. Please contact

7.7 Multi-Drop Bus / Internal Communications Protocol (MDB/ICP)

To use the MDB mode an IF5 interface box must be fitted to the NV9 Validator. DIPswitches 3 & 4 must be in the up position to select 'Special' mode on the validator and the MDB option of the interface firmware loaded into the NV9.

(DIPswitch 2 enables a fast reset on power up)

The Fast Reset option should be set if the NV9 continuously resets the stacker after the machine is powered on. The Fast Reset option can be enabled via the Validator Manager Software, or by setting Dipswitch 2 to the ON position.

Note:

- Please refer to the Multi-Drop Bus specification for the suggested current drive circuits available.
- The NV9 supports the MDB protocol version 1, level 1
- For detailed information and full protocol specification please refer to www.vending.org

MDB defines a serial bus interface used in electrically controlled vending machines (see figure 6). This is a 9600 Baud Master-Slave system where the NV9 banknote validator is a slave to a master controller. A master has the capability of communicating with 32 peripherals or slaves. The master is defined as the Vending Machine Controller (VMC).

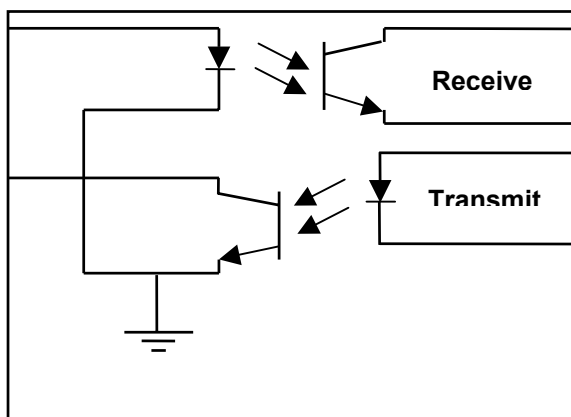


Figure 7 – MDB Opto Isolated Input / Output circuits NV9 MDB Slave

The NV9 banknote Validators have a unique address – 00110XXX binary (30H). The VMC polls the bus to detect presence of the NV9 Validators or get information on the current status of the Validators.

The Validators will respond when asked for activity with an acknowledgment, a negative acknowledgment or a specific reply, depending on its current status. Bus crashes are avoided as the Validators respond to being polled only by the VMC.

The international country code must be set for the country in which the Validators will be operating. This is either the international telephone code for that country, or the country code taken from ISO4217. The code is represented as two bytes. The initial digit signifies the source of the code. 0 signifies the telephone code is used, 1 signifies ISO4217 has been used.

For the USA the country code is 00 01, or 18 40

For Great Britain the code is 00 44, or 18 26.

The scaling factor must also be specified for each Validator. All accepted note values must be evenly divisible by this number.

- This number would be set to 100 (Hex 64) for the Euro or Great Britain.
- The number would be set to 1000 (Hex 03E8) for Columbia.
- The number of decimal places must also be programmed for each Validator

- The number would be set to 2 for Euro or USA
- The number would be set to 3 for Columbia

Adopting the numbers above:

- £5 would be displayed as 5.00
- £10 would be displayed as 10.00
- \$1 would be displayed as 1.00
- 1K Columbia would be displayed as 1.000

7.8 CCTalk Protocol – CCT

The NV9 supports the CCTalk serial protocol for easy interfacing with host machines that support this protocol.

To use CCTalk mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the CCT option of the interface firmware must be loaded into the NV9.

(DIPswitch 2 is non functional in this mode).

Pin out connections on NV9 for CCTalk are shown below (see figure 7) looking at the connection pins on the NV9 interface connector as defined in the CCTalk specification. All communications with the note validator must be encrypted using the encryption key, the default encryption key will be printed on the label of the NV9.

NOTE: For detailed information and full protocol specification please refer to www.CCTalk.org

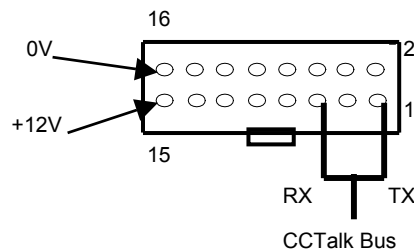


Figure 7 - CCTalk Connection Pins on the NV9

The default encryption key will be set to the key code printed on the label on the NV9. If the key is changed to a new stored key by the host machine, the key can be reset to the default by the following steps below.

- Power off NV9.
- Set all 4 DIPswitches to the Up position.
- Apply power (no CCTalk comms).
- Red LED will now be flashing.
- Set DIPswitches 1 and 2 down.

The code is now reset to that printed on the label.

7.9 Cash Code Serial Protocol – Ccnet

The NV9 supports the ccnet serial protocol for easy interfacing with host machines that support this protocol.

To use CCnet mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the CCN option of the interface firmware must be loaded into the NV9.

DIPswitch 2 is used to select default Baud rate –

Down = 9600

UP = 19200

Pin out connections on NV9 for ccnet are the same as for SSP. (See Chapter 6.3, Table 5)

Some host machines may require a cash box removed status. To simulate this the host machine can hold Inhibit 4 high, for the duration of Inhibit 4 being held high the validator will report a "Drop Cassette out of Position" status. In normal operation, Inhibit 4 needs to be held low.

Note: For detailed information and full protocol specification, please refer to the CashCode specification

7.10 Non-Isolated Serial Protocol. (NIS)

To use NIS mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the NIS option of the interface firmware must be loaded into the NV9.

(DIPswitch 2 is not functional in this mode).

There is a single output DATA line from the NV9. There are three control lines, two from the controller "ACCEPT ENABLE" and "SEND" and one from the Validators IRQ (INTERRUPT) (see table 8).

CAUTIONS:

- **PLEASE NOTE THAT THE NV9 IS REQUIRED TO OPERATE ON A +12VOLT DC POWER SUPPLY.**
- **THE NV9 GROUND MUST BE CONNECTED TO THE GROUND OF THE CONTROL SYSTEM.**

For further details on this protocol please refer to the series 2000 interface manual (reference number 20105-002850046-PS), or contact

support@innovative-technology.co.uk.

Connection Details:

Signal	NV9
+12V	15
0V	16
ACCEPT ENABLE	6
SEND	7
IRQ (INTERRUPT)	2
DATA	1
OUT_OF_SERVICE	3

Table 8 - Extended Interface USA Serial

8 Updating Currency and Firmware Files

Note: Validators are supplied already programmed from the factory. Please skip this section unless the validators need to be re-programmed with an updated Currency Firmware file.

The NV9 Validator can only be re-programmed using the ITL Bank Note Validator Currency Manager 2.9.7 or greater, by cloning from a master unit or via a DA3.

8.1 ITL Bank Note Validator Currency Manager

In order to use the ITL Bank Note Validator Currency Manager software, which is supplied with a range of currencies, it must be installed from the DA1/DA2 CD or by downloading from the web site. For the PC System Specification refer to [Appendix F](#).

A list of currently supported currencies is maintained on our web site, where new releases can be downloaded. Further details are available from support@innovative-technology.co.uk

For details on how to register for the first time log in, please refer to [Appendix G](#)

8.2 NV9 – NV9 copy (Cloning)


Note: Cloning is only available with Firmware 3.19 or lower. For later Firmware versions The Validator Programming System (DA3) can be used as an alternative. (See Chapter 12.2)

Overview

This facility exists for a NV9 Note Validator to copy a program and settings to another NV9. The “Master” Validator will transmit the currency data and upgrade the Slave’s Firmware. For cloning it is recommended to use the Cloning Kit 2 (CK2).

Requirements

- Master to have Firmware 3.15 or greater.
- Cloning Kit 2 (CK2).
- +12V power supply.

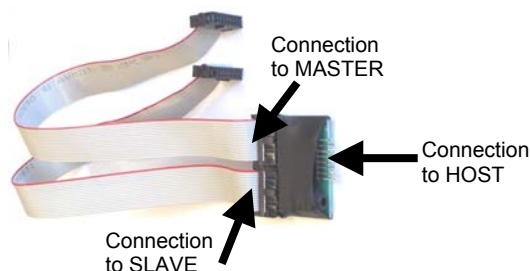

Start-UP Configuration

NOTE: The Master will only update the Slave’s Firmware if the version of the Master is greater than that of the Slave. If the Master Firmware is less than the Slave, then the copy process is aborted.

If the Firmware on the Master and Slave are the same, only the currency will be transferred.

- Remove the power from the Master and Slave units.
- Set DIPswitches 3 UP and 4 DOWN to select SSP interface mode on both NV9s.
- Use the NV9 Cloning Kit 2 (CK2) and connect the two units together as per CK2 label.
- Turn on the +12V power supply.

Cloning process

- The Master unit will flash the RED and GREEN LED's if the connector is configured correctly.
- RED and GREEN LED's on the master flash together – attempting to communicate with Slave.
- RED and GREEN LED's on master flash alternately - communication established, master waiting for Slave to reset.
- If communication has been established and the Slave has reset then the Master will read the Slave firmware version and decide on next action.
- If the Slave firmware version is not compatible with master: Master RED and GREEN LED's will flash alternately at 1-second rate. No further copy action will take place.
- If slave firmware version is greater than master: Master RED and GREEN LED's will flash alternately at 1 second rate. No further copy action will take place.
- If Slave firmware version is same as Master then Master will start to copy currency data to Slave.
- If Slave firmware version is less than master then master will start to copy firmware data to Slave.

Firmware copy

CAUTION: IF THE MASTER RED LED CHANGES TO SLOW BLINK (1 PER SECOND) THEN COMMUNICATION HAS BEEN LOST AND COPYING SHOULD BE RESTARTED FROM BEGINNING.

- Master RED LED will blink rapidly during firmware copy (the LED will pause from time to time).
- When the firmware copy is complete, the Slave will reset and Master unit will wait to re-establish communications. (LED flashes as at first stage power-up).
- When slave is ready, master will initiate currency data copy.

Currency copy

CAUTION: IF THE MASTER RED LED CHANGED TO SLOW BLINK (1 PER SECOND) THEN COMMUNICATION HAS BEEN LOST AND COPYING SHOULD BE RESTARTED FROM BEGINNING.

- Master GREEN LED will blink rapidly during the currency copy process and the LED will pause from time to time.
- When currency copy is complete, Master will show GREEN and RED LED's continuously and slave will reset.
- NV9 – NV9 copy is now complete.

9: Mechanical Installation

The NV9 validators can be supplied with various bezels options as shown in [Appendix D](#).

9.1: Changing or removing the bezels

Push both of the red locking arms so that they disengage from the bezel sides. The bezel may then be unhooked from the 6 locating points, (see figure 10). To refit push the bezel onto the six locating points (3 each side). The red locking arms will spring back to secure the bezel

CAUTION: ALWAYS MAKE SURE THAT BOTH THE LOCKING ARMS HAVE FULLY LOCATED IN TO PREVENT DAMAGE.

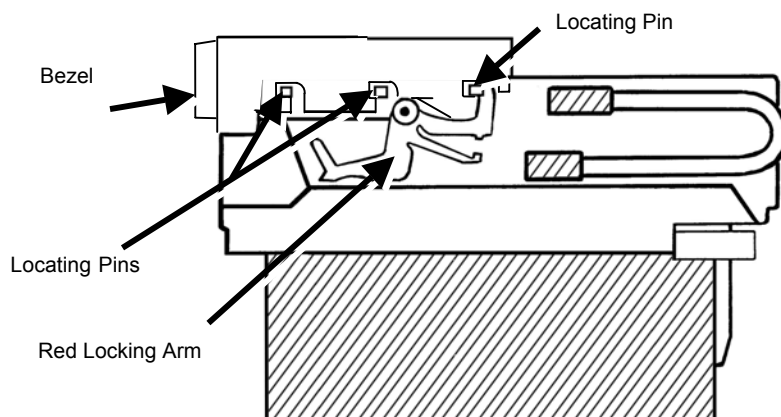


Figure 10 - Bezel and Validator Removal

9.2: Cash box Options

The NV9 validators can be supplied with various cash box options, shown in [Appendix E](#)



Figure 11 - Clip On and Slide In Cash Boxes

- 300 Note Clip on (part no PA185) for the vertical bezel options only.
- 300 Note Slide in (part no PA192) for both the horizontal and vertical bezel options.
- 600 Note Clip on (part no PA193) for the vertical bezel options only.
- 600 Note Slide in (part no PA194) both the horizontal and vertical bezel options.
- 300 Note Lockable for the horizontal bezel option only (part no PA186). (Lock is not supplied – use with Baton Lock type 6086-00KAL06 with supplied cam)

10 Routine Maintenance

The NV9 Validator has been designed to minimise any performance variation over time. Much of this is achieved by careful hardware and software design.

However, depending upon the environment the NV9 may at some time require cleaning, belt changing or note path clearing.

10.1 Cleaning

CAUTION: DO NOT USE SOLVENT BASED CLEANERS SUCH AS ALCOHOL, PETROL, METHYLATED SPIRITS, WHITE SPIRIT OR PCB CLEANER. THIS WILL RESULT IN PERMANENT DAMAGE TO THE VALIDATOR, ONLY USE A MILD DETERGENT.

To clean, slide the red release catch on the end of the NV9 Validator to the left, to open the note path. The note path and lozenge are now exposed for cleaning.

Carefully wipe the surfaces with a soft lint free cloth that has been dampened with a water and mild detergent solution (i.e. household washing up liquid). Take particular care around all the sensor lenses (see figure 12), ensuring they are clean and dry.

CAUTION: WHEN CLEANING THE RECESSED FRONT SENSORS, USE A SMALL SOFT BRUSH OR COTTON WOOL BUD

If a lens has become badly scratched do not attempt to polish it. Contact ITL for further advise, as there may be damage to the optical properties of the lens.

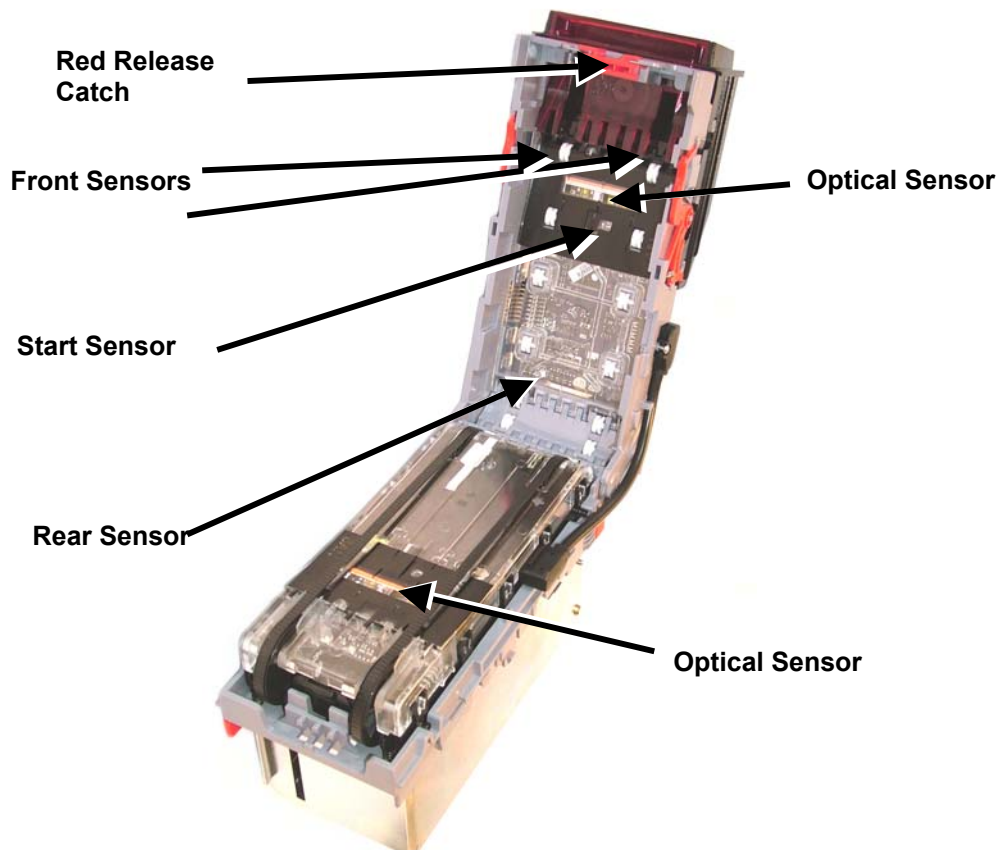


Figure 12 - NV9 Sensors

10.2 Note Path Debris Clearing / Belt Changing

To access the note path and lozenge, slide the red release catch on the end of the NV9 Validator and lift to open. Push the lozenge release catch and lift; the note path and lozenge are now exposed for maintenance (see figure 13).

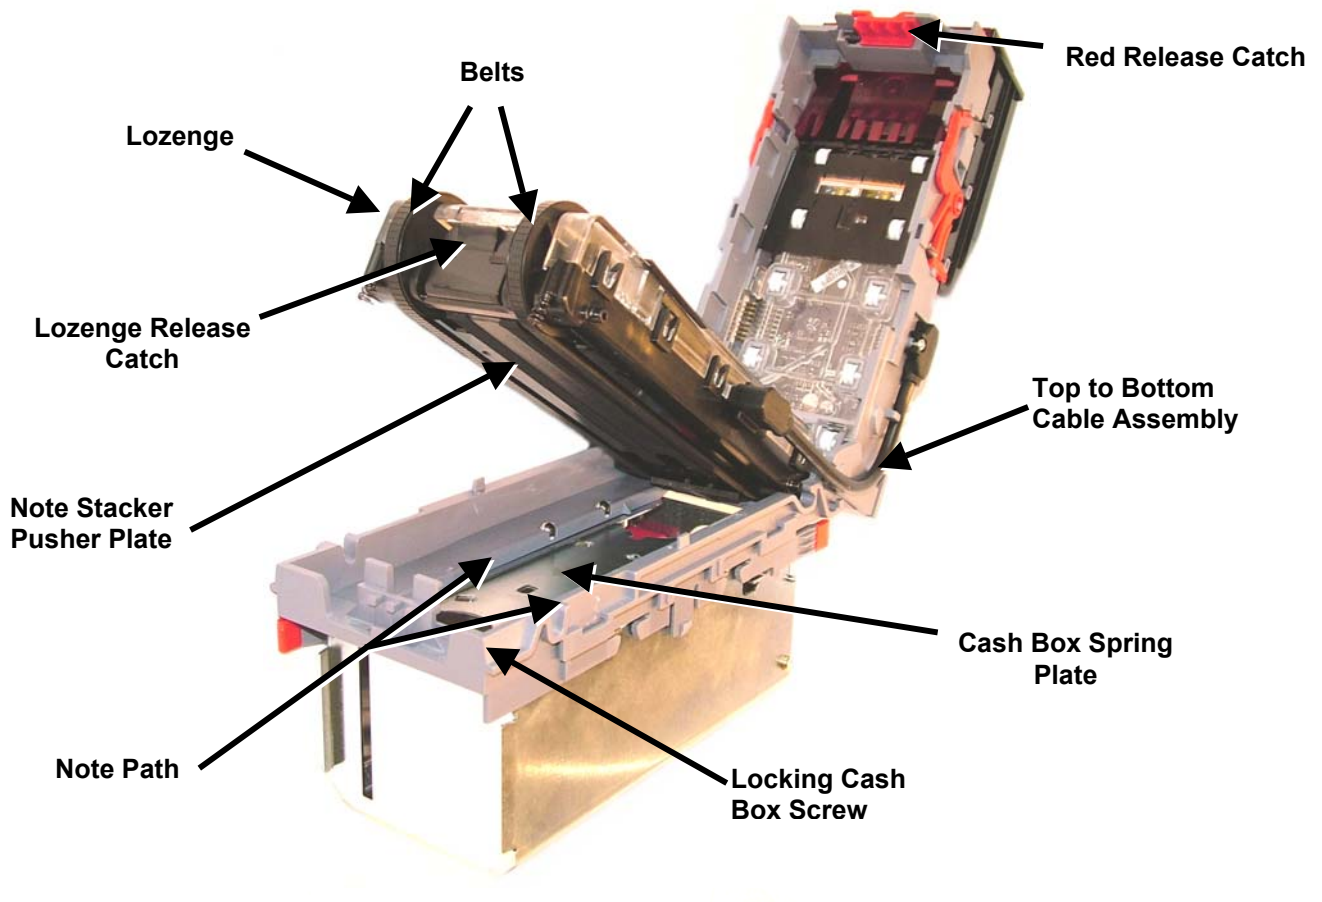


Figure 13 - NV9 Note Path and Lozenge Access

Debris Clearing

Examine the note paths, lozenge and note stacker for any dirt or debris.

Carefully clear and wipe the surfaces of the note paths and lozenge with a soft lint free cloth that has been dampened with a water and mild detergent solution (i.e. household washing up liquid.). Take particular care around all the sensor lenses (see figure 12), ensuring they are clean and dry.

Check that the note stacker and cash box spring plate are not jammed.

Belt Changing

With the NV9 lozenge exposed (see figure 13) carefully unplug the bottom connector of the "top to bottom cable assembly" from the lozenge.

Remove and place the lozenge on a clean dry surface and remove the belts, sliding them off the smallest wheels first. Replace the belts using the reverse procedure from the above.

NOTE: With the Locking Cash Box, the Locking screw must be removed first.

11: Fault Finding Analysis

PROBLEM	CHECK	SOLUTION
Validator will not accept notes	<p>Is the Bezel lit? Are any "STATUS" lights lit?</p> <p>Is the problem with all notes or just one denomination</p> <p>Is the Top to Bottom cable connected properly?</p>	<p>Check the Power Supply specification Check the LED Status codes (Chapter 5.2). Check correct interface is programmed in using VALIDATOR MANAGER software.</p> <p>Check the inhibit lines (pins 5 –8) from Host machine to Validator.</p> <p>Test cable for continuity and refit.</p>
Validator runs slowly and/or intermittently	<p>Check note paths for foreign objects Check note path for damage Check Voltage level of supply Check drive belts are fitted correctly Ensure that there is no grease on the drive belts</p>	<p>Clean the note path.</p> <p>Replace damaged parts</p> <p>Ensure PSU meets the required specification Refit belts</p> <p>Replace belts</p>
Notes are accepted but no credit received	<p>Is the PSU within specification? Has the correct interface been selected?</p>	<p>Check Power Supply specification</p>
Validator rejects genuine notes	<p>Is the correct currency file programmed?</p> <p>Is the required note contained in the Currency file?</p> <p>Are sensors "OK"</p>	<p>Check correct Currency is programmed in using Validator Manager software Contact Support with "Issue Date" and "Note Denomination" for details</p> <p>Run Diagnostics in Validator Manager</p>

12 Support Tools

The following support tools are available for use with the NV9 Bank Note Validator:

- ITL Bank Note Validator Currency Manager Software.
- Validator Programming System (DA3)
- Downloads from the Innovative Technology Ltd website: www.innovative-technology.co.uk
- E-mail Support via support@innovative-technology.co.uk

NOTE: The Validator must be in SSP mode when connected to a computer and then returned to the original Settings when complete

12.1 ITL Bank Note Validator Currency Manager

The ITL BNV Currency Manager software offers the following functions:

- Program the Validator by downloading pre-prepared currency data via the DA1 or DA2 kit.
- Check the firmware version and currency set already loaded on an NV9 unit.
- Adjust the channel and pulse configuration on a pre-programmed NV9 to your own requirements.
- Download a new version of firmware onto the NV9.
- Use diagnostic functions to check Validators operation (firmware version 3.15 and greater only).

The software will run on an IBM compatible Personal Computer with Pentium™ processor or equivalent (see [Appendix F](#) for operating system requirements) and requires a DA1 kit fitted to the serial port or DA2 kit fitted to the USB port. (See [Appendix C](#))

12.2 Validator Programming System (DA3)

The DA3 is a programming system designed to enable the programming of ITL Bank Note Validators in the field without the use of a PC.

Once the DA3 has been programmed the user can:

- Update the existing software within a validator to the latest versions using the BNV Match Download function.
- Overwrite the existing software within a validator with pre-selected (Tagged) files using the BNV Override Download function.
- Test the functionality of the validator away from the Host machine.

For full DA3 operation and functionality details please refer to the DA3 User Manual (Document number GA339)

12.3 Internet Website support


The Innovative Technology Ltd website provides the means to download new and updated currency sets and new versions of firmware for the NV9. You can obtain these along with technical bulletins by visiting www.innovative-technology.co.uk


To register for the first time using your own user name and password please refer to [Appendix G](#).


12.4 E-mail Support


If the data you require is not available over the Internet Innovative Technology supports an e-mail system to help customers with unusual requirements. The address is:

support@innovative-technology.co.uk

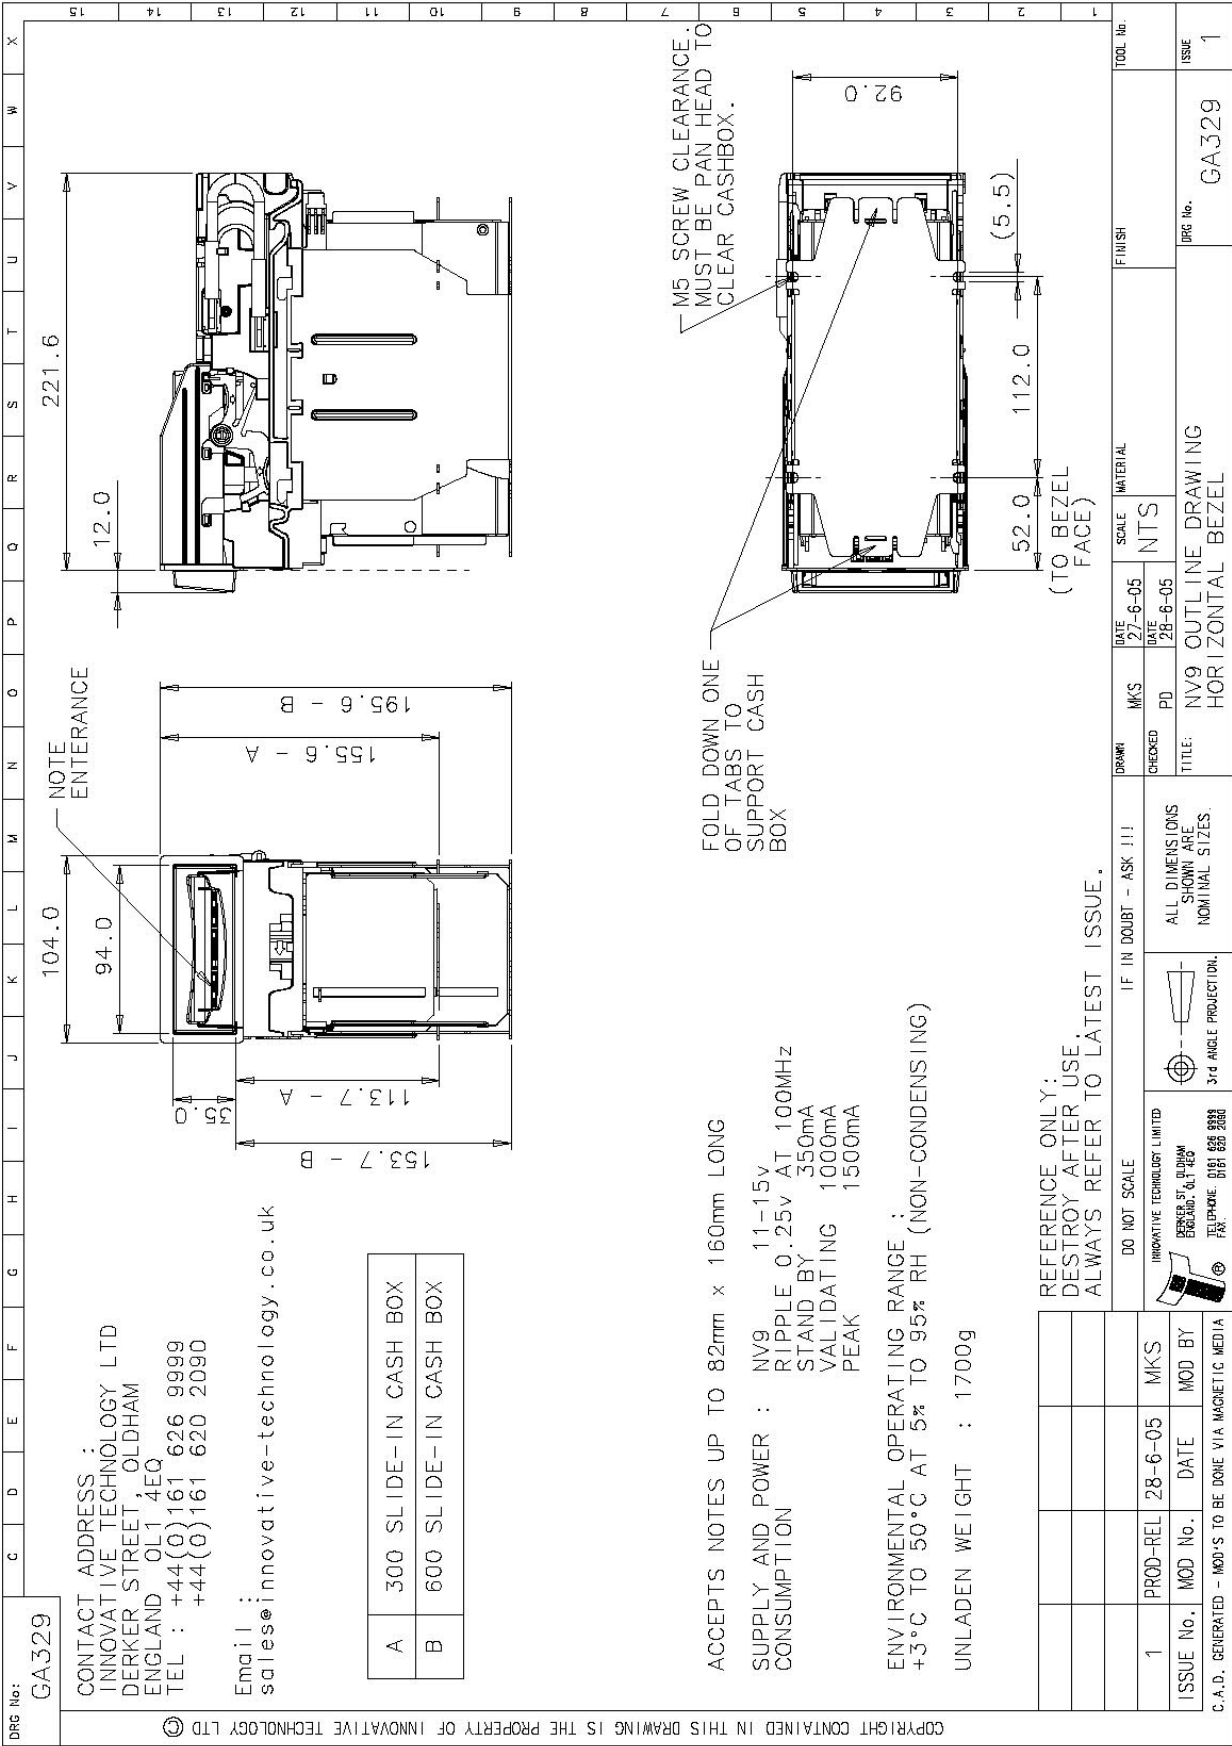

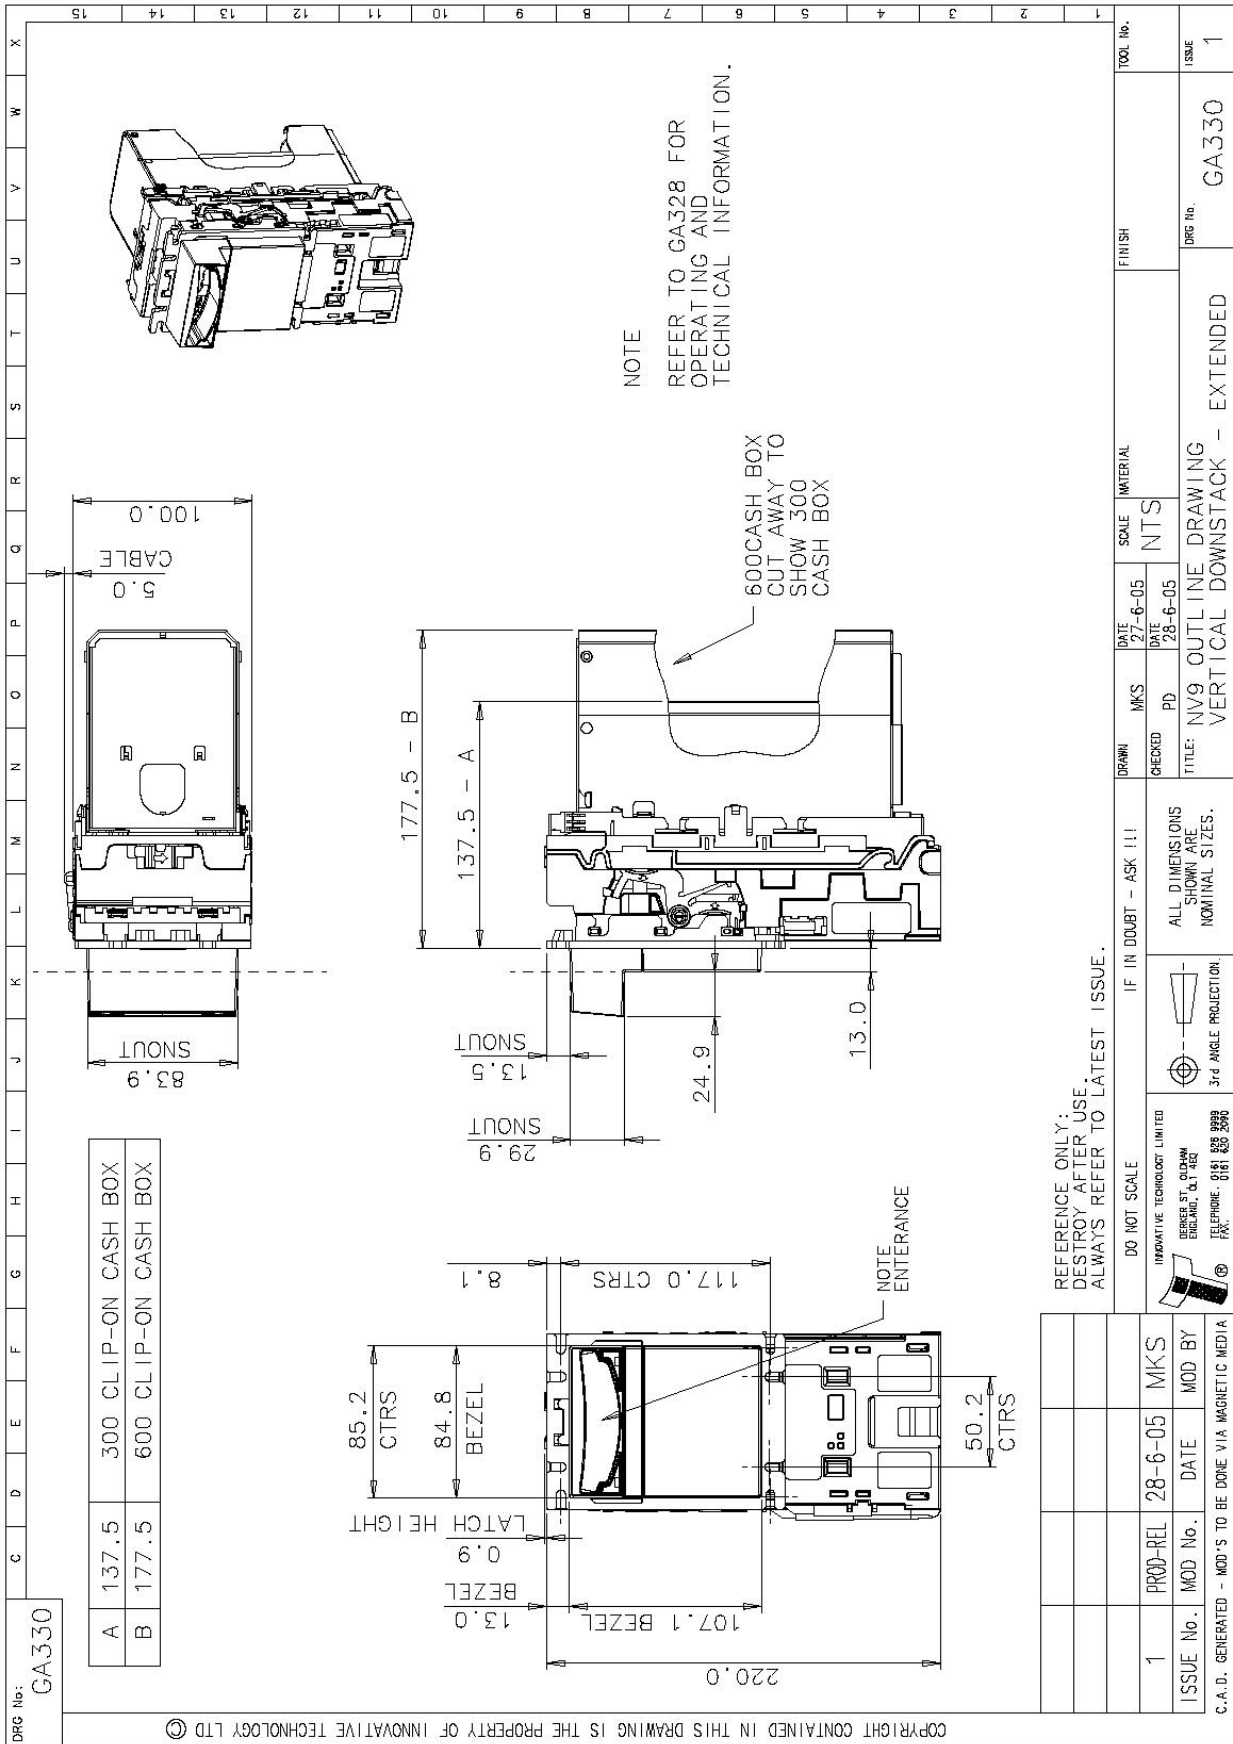

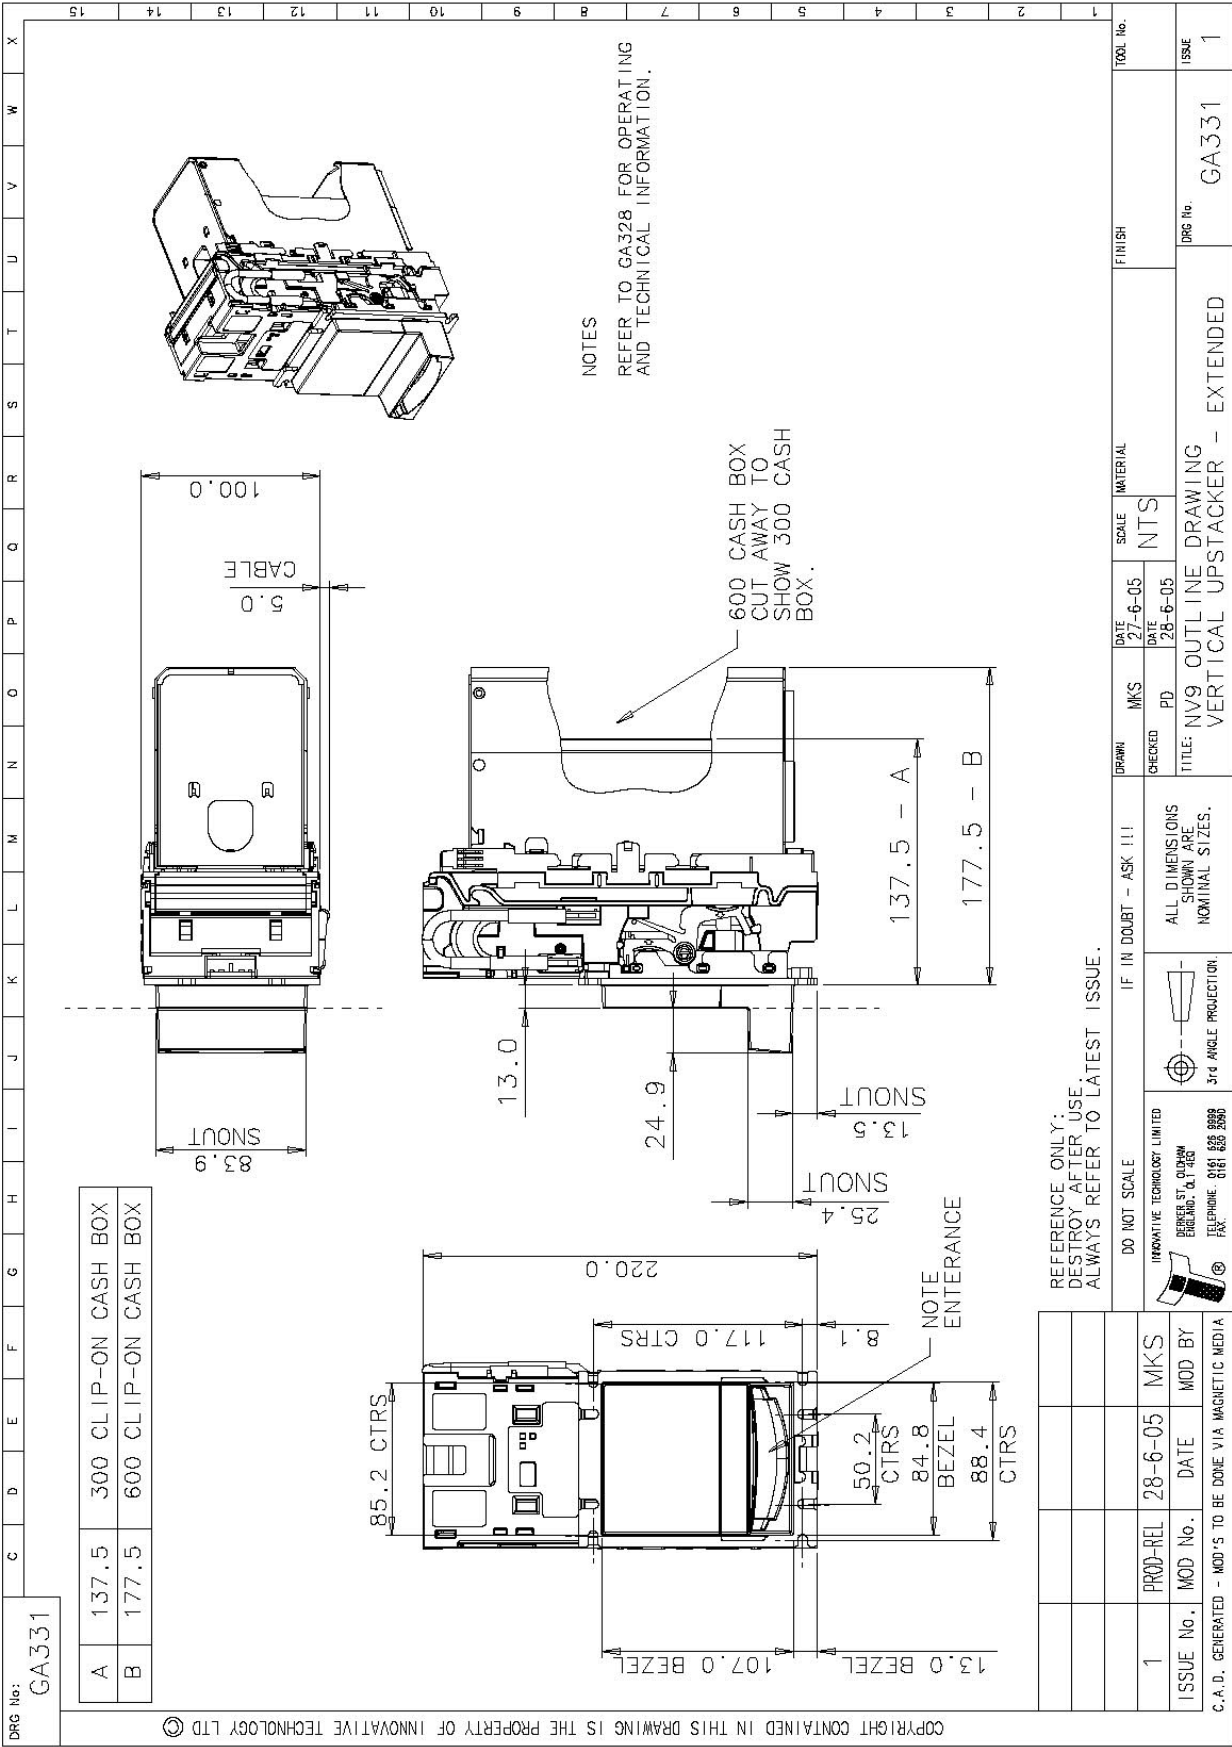

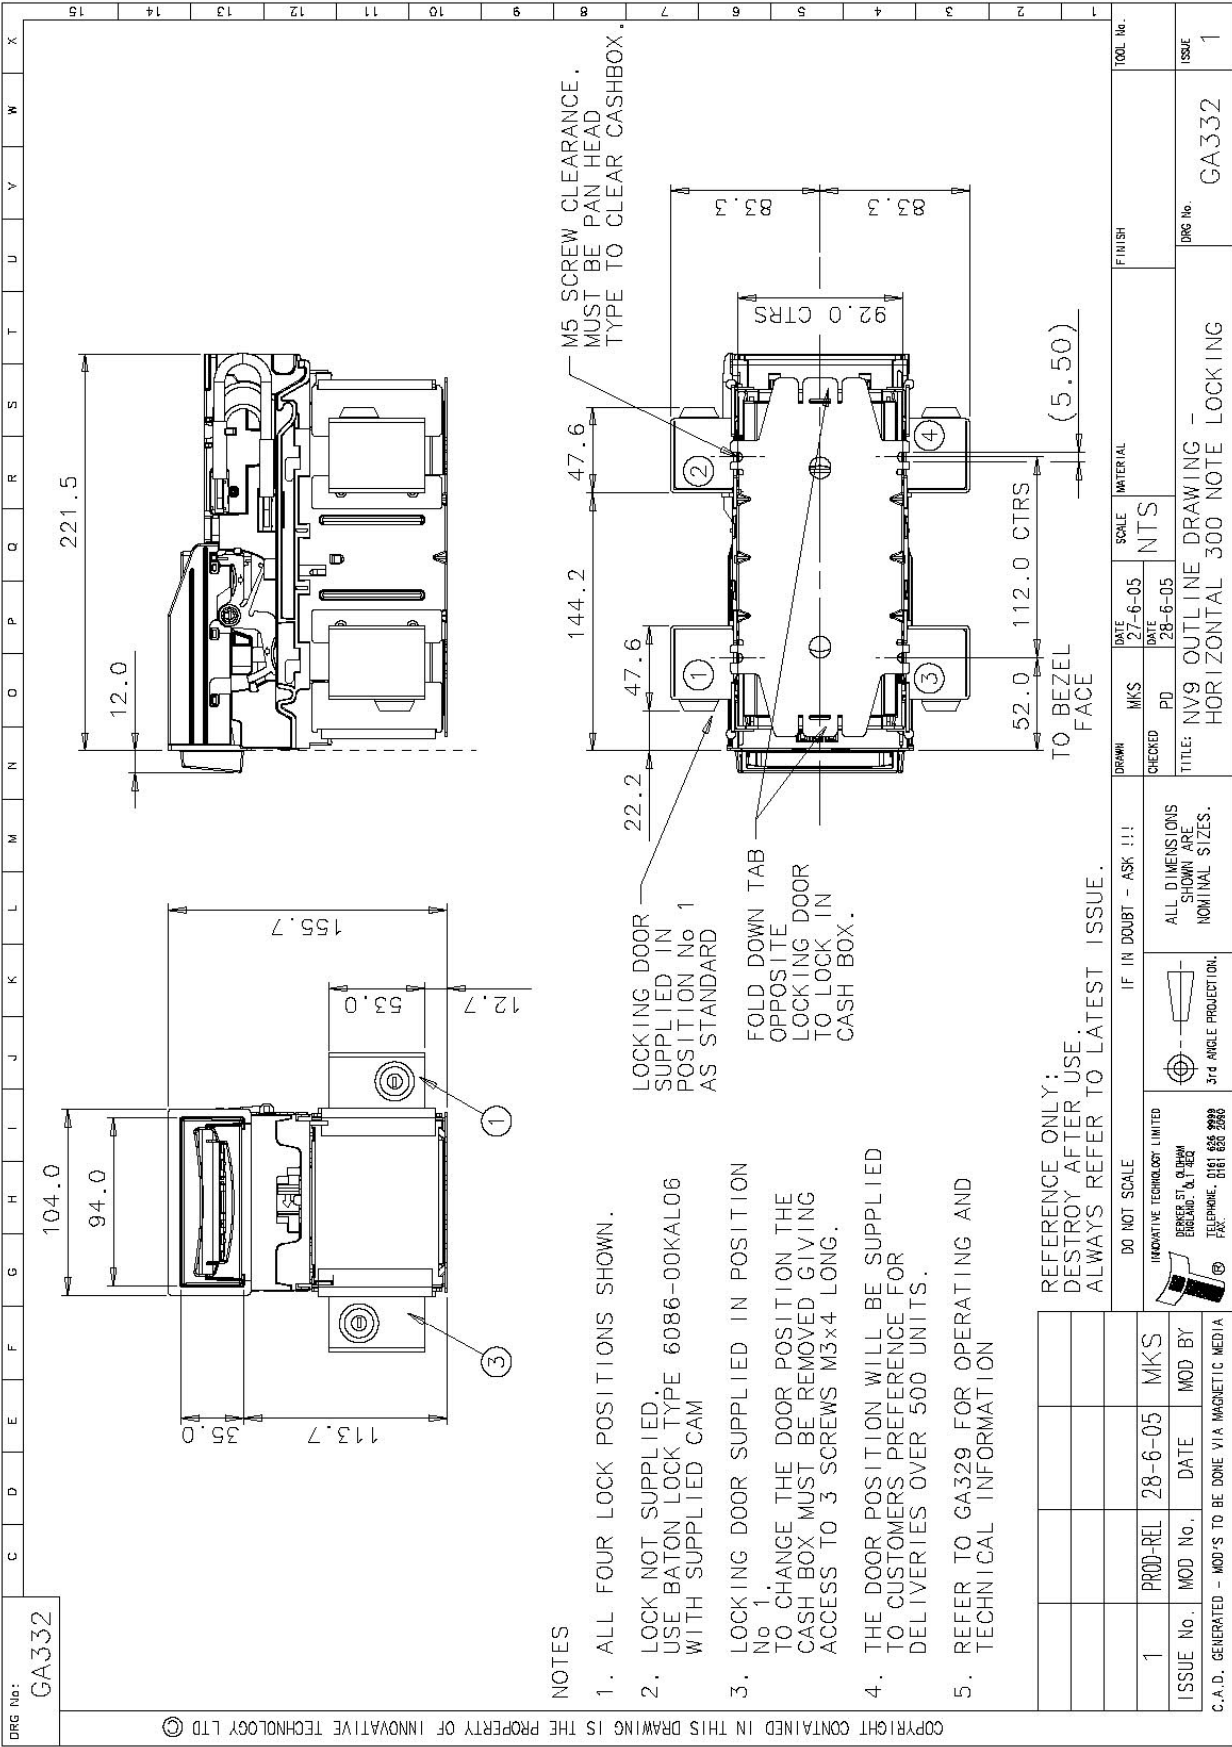

Appendix B - ESCROW Control

The NV9 has a single note escrow facility (pin 10) used in Parallel, Pulse and Binary modes. This allows the Validator to hold onto the note once accepted, and then only stack the note in the cash box when the host machine confirms that the Vend operation has been completed. If no confirmation of the Vend is received then the note will be returned to the customer after 30 seconds, (see figure 19).

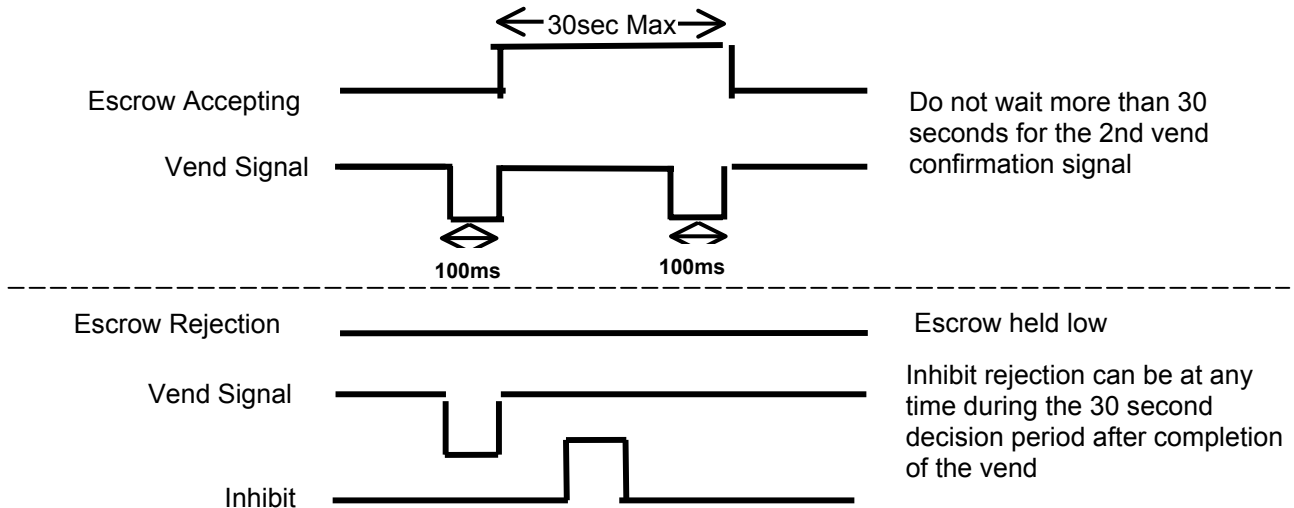


Figure 19 - Escrow Timing Diagram for Parallel Vends

If the host machine itself aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately. The sequence of operations is as follows:

- Pin 10 held low awaiting note insertion.
- Note inserted. Validator issues a 100ms pulse on the appropriate channel.
- The host machine initiates vend process.
- The host machine sets pin 10 high to indicate that it wants the note. If this is not done within 30 seconds the Validator will return the note.
- The Validator issues a 100ms pulse on the appropriate channel after pin 10 going high to indicate final acceptance of the note. If the signal has not been received within 30 seconds it indicates the customer has forcibly retrieved the note and the vend will be aborted.
- The vend process is completed.
- The host machine sets pin 10 low in expectation of the next vend.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. For channels above 4, setting all the inhibits high will cause a note reject.

In the event of a note being forcibly removed from the mouth of the NV10 during the 30-second interval, the NV10 will go out of service for 45 seconds.

Appendix C - interface Tools DA1 - DA2

The DA1/2 Kits are designed for the following:

- Connecting of ITL Note Validators to a PC for the upgrade and user option setting of Currency and Firmware files.
- Testing note acceptance of Note Validators independent of the host machine to confirm that the validator is working.

The DA1 and DA2 Kits comprise the following components:

DA1	DA2
DA1 adapter board	DA2 adapter board
DA1 to NV7, 8, 9 and 10 cable	USB type-A to Type-B cable
DA1 to NV4 Cable	DA2 to NV7, 8, 9 and 10 cable
Power Cable	Power Cable
ITL Support CD-ROM	ITL Support CD-ROM

Connecting a DA1 to a validator and PC

For the PC system specification and set up refer to [Appendix F](#).

Connect the DA1 to the validator as shown below (see figure 1), using the 16-way to 5-way connector. The supplied 3.5mm jack plug and 2 banana plugs are used to supply power to the DA1 when using a variable Bench power supply (Connect the +12 volts to the red banana plug and GND (0V) to the black plug). Alternatively a Portable DC Power Adapter supplying 12v and 1.5A minimum can be used.

Plug the 9-way D-type connector into the serial port of the PC and note of the number of the port, as this will be needed later for configuring the software. Once the connections have been made install the appropriate software for the validator you are using.

NOTE: The Validator must be in SSP mode when connected to a computer and then returned to the Original Settings when the download is complete

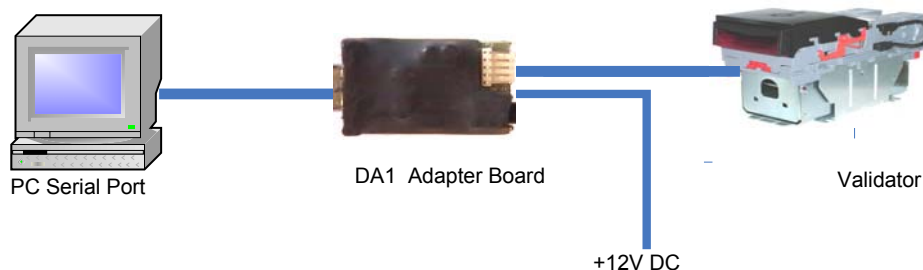


Figure 1 - Connecting DA1 to a NV9 and PC for upgrading

Connecting a DA2 to a validator and PC

For the PC system specification and set up refer to [Appendix F](#). Details of how to install the DA2 are provided in the Support CD.

Plug the USB type Connector into the USB port of the PC. Once the connections have been made install the appropriate software for the validator you are using.

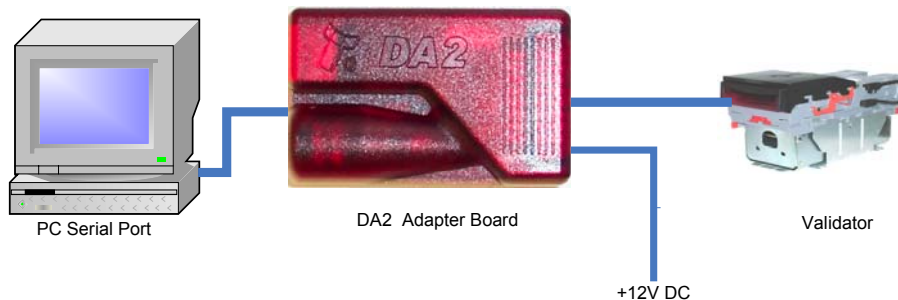


Figure 2 - Connecting DA2 to a NV9 and PC for upgrading Software Installation

Software Installation

DA1 - To install the ITL BNV Download Manager Software insert the CDROM into the correct PC drive. The CD should automatically run and an installation menu will appear. Double click the ITL BNV Download Manager and follow the on-screen instructions. You can also install the Currency files, Firmware files and the Technical Manuals for each specific product as well as other generic documentation.

The Quick Start Guide for the DA1 is document number GA151.

DA2 - To install the ITL BNV Download Manager Software insert the CDROM into the correct PC drive. The CD should automatically run and an installation menu will appear. Double click DA2 installation guide (GA338) and follow the instructions relating to your specific Operating System.

NOTE: All files contained on the CD are available from the ITL Website:

<http://www.innovative-technology.co.uk/>

Please contact support@innovative-technology.co.uk, if you require further assistance.

Appendix D - Bezels



PA189
Horizontal Bezel Assembly



PA190
*Vertical Up Stack Extended
Snout Bezel Assembly*



PA189BK
Horizontal Bezel Assembly (black)



PA190BK
*Vertical Up Stack Extended
Snout Bezel Assembly (black)*



PA188BK
Vertical Up Stack Black



PA268
69mm Fixed Width Horizontal Bezel



PA268BK
69mm Fixed Width Horizontal Bezel (black)



PA296BK

*Vertical Up/Down Flat
66mm Bezel Assembly (black)*



PA256

66mm Vertical Up Bezel



PA191

*Vertical Down Stack Extended
Snout Bezel Assembly*



PA324

*Vertical Up/Down Extended 69mm
(also available in Black)*



PA323


*Vertical Up/Down Flat 69mm
(also available in Black)*

Appendix E – Cash Boxes



PA185

Clip On Cash Box Assembly (300C)

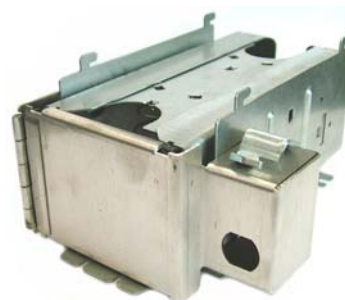

PA186

Locking Cash Box Assembly (300L)




PA192

Slide On Cash Box Assembly (300S)



PA193

Clip On Cash Box Assembly (600C)

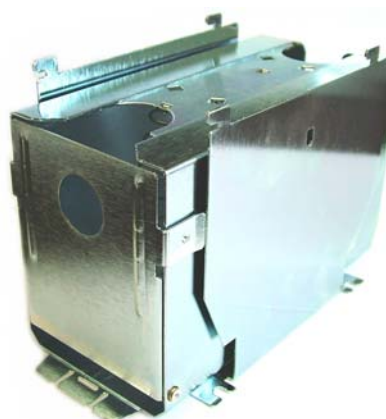

PA194

Slide On Cash Box Assembly (600S)

Appendix F - PC System specification

The ITL Validator Software has been tested and verified using Windows 2000/XP™ on a Pentium™ based PC System ((© Microsoft and Intel). Full functionality cannot be guaranteed on lower specification systems.

Appendix G – Website Registration

On the internet access the Web site www.innovative-technology.co.uk



Designed and produced by www.aminto.com

The Innovative Technology Ltd Head Office is:

Derker Street
Oldham
England
OL1 4EQ
Tel: 00 44 0161 626 9999
Fax: 00 44 1061 620 2090

Position the cursor over the “SUPPORT” Button on the MAIN Tool Bar.

Left click the mouse.

The “SUPPORT” screen will now be displayed.

English | Deutsch | Русский | Espanyol Catalan | Español Castellano | Português



Home

About ITL

Products

Careers

Operations

Support

News

Firmware Updates | Currency Download | Software Download | **FAQ's**

You are here: Support > FAQ's

FAQ's

What is the bezel opening for NV8 ?

The NV8 bezel opening is 105mm x 43mm. This opening is the same for the NV4 universal bezel.

What Interfaces are available on NV4, NV7 & NV8 ?

The Smiley Parallel interface which can have a maximum of 4 channels. There is a separate wire connection for each channel. Each output is Open Collector configuration which will therefore necessitate a pull up resistor on the host machine. The output signal is a single 100ms active low pulse for the relevant channel. The Pulse interface provides a preset (different) number

How do you update the currency files on ITL validators ?

There are two ways to update the dataset and firmware files. The new files can be programmed onto the validators via the Currency manager programs. The validator is connected to the serial port of a PC via a DA1 kit. The DA1 kit must be powered from a +12volt power supply which can deliver at least 2 Amps.

The validators can also be cloned from each other, using one as a Master (which has been loaded with the latest files). The cloning kits are different for NV4 and NV7/8.

What are the differences between NV4 and

On the "SUPPORT" Tool Bar beneath the MAIN Tool Bar position the cursor over the "Currency Download button.

Left click the mouse.

The "LOGIN" screen will now be displayed.

The screenshot shows the Automated Transactions website. At the top, there is a navigation bar with links for English, German, Russian, Spanish, and Portuguese. The Automated Transactions logo is on the right. Below the navigation bar is a menu with links for Home, About ITL, Products, Careers, Operations, Support, and News. The main content area is titled "Innovative Technology Download" and contains a login form. The form has fields for Username and Password, and a Login button. Below the form, a message states "You need to login to view this page." and provides links for registration and technical support. The footer contains links for ITL Home, Contact Us, Sitemap, About ITL, and Privacy Policy.

English | German | Russian | Spanish | Portuguese

Automated Transactions
INTELLIGENCE IN VALIDATION

Home | About ITL | Products | Careers | Operations | Support | News

Innovative Technology Download

Login

Username

Password

You need to login to view this page.

For a Username and Password please [click here](#) to register.
For Technical Support please contact [Technical Support](#)

[ITL Home](#) • [Contact Us](#) • [Sitemap](#) • [About ITL](#) • [Privacy Policy](#)

If you are a Registered User enter your User Name, your Password, then position the cursor over the LOGIN button. Left click the mouse,

The Dataset Upgrade information screen will be displayed (See Page 46)

If you are not a Registered User, position the cursor over the CLICK HERE button and left click the mouse.

The Registered User application form screen will be displayed.

[Home](#)[About ITL](#)[Products](#)[Careers](#)[Operations](#)[Support](#)[News](#)

In order to download datasets for Innovative Technology Products you must be a registered user.

Please fill in the following information

Registration Details

Company Name:

Email Address:

User Name:

Job Description:

Password:

Re-Type Password:

Innovative Technology Ltd publishes its Technical bulletins via email. If you do not wish to receive these bulletins please tick this box.

☐

[Register Details](#)

[ITL Home](#) ■ [Contact Us](#) ■ [Sitemap](#) ■ [About ITL](#) ■ [Privacy Policy](#)

On the Registered User application form enter the following information in the data fields illustrated above:

Enter your company name.

Enter a valid E-Mail Address.

Enter your selected User Name.


Select a Job Description from the Drop Down Menu.

Enter a Password of your choice.

Re-enter your chosen Password.

Position the cursor over the Register Details button and left click the mouse.

An acknowledgement screen will be displayed advising you that approximately ten minutes will be required to activate your account.

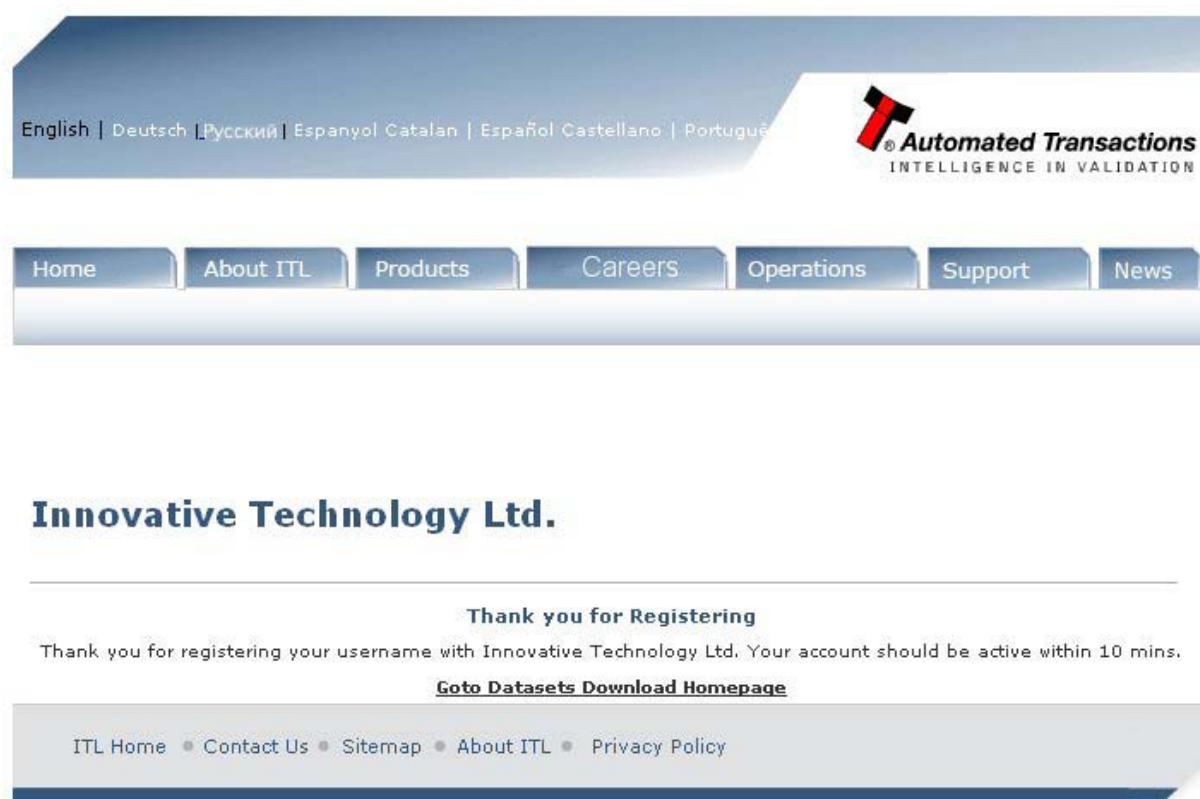

Position the cursor over the “Go To Datasets Download Homepage”.

Left click the mouse.

The “Datasets” screen is now displayed (See Page 46).

[Home](#)
[About ITL](#)
[Products](#)
[Careers](#)
[Operations](#)
[Support](#)
[News](#)

Dataset Upgrades for ITL Validators



Welcome. You are currently Logged in as: brownw





NV10

All Currencies

Search

To download a currency: Select the Validator Type and the currency then Click Search. Then click on the currency file required to download.

	Name	Code	Date	Issue	Protected*	Validator	
	U.A.E. (5)	AED0680101	30/5/2006	1		NV8	Download/Summary
	Armenia(500-1K)	AMD0180202	5/12/2005	2		NV8	Download/Summary
	Angola(50-100)	AOA0180202	20/1/2006	2		NV8	Download/Summary
	Argentina (2-5-10-20-50-100)	ARP01401	12/7/2006	1		NV4	Download/Summary
	Argentina (2-5-10-20-50-100)	ARP0190200	19/6/2006	2		NV9	Download/Summary
	Argentina(2-5-10-20-50-100)	ARS0170002	11/8/2006	2		NV7	Download/Summary
	Argentina(2-5-10-20-50-100)	ARS0180404	14/7/2006	4		NV8	Download/Summary
	Australia (5-10-20-50-100)	AUD0110100	30/8/2006	1		NV10	Download/Summary
	Australia(5-10-20-50-100)	AUD0171111	10/7/2006	11		NV7	Download/Summary
	Australia(5-10-20-50-100)	AUD0180002	7/9/2005	2		NV8	Download/Summary

Go to the FIRST Page
Go to the PREVIOUS Page
Go to the NEXT Page
Go to the LAST Page

* If a dataset is protected please contact Innovative Technology For further instructions.

* If you are unable to locate the required dataset please contact [Technical Support](#) for further assistance

11 to 20 of 453 Datasets

[ITL Home](#)
[Contact Us](#)
[Sitemap](#)
[About ITL](#)
[Privacy Policy](#)

Firmware files and Software programs are downloade in the same way via the Firmware Updates and Software Download headings in the Support tab.